

KONICA MINOLTA

PARTS GUIDE MANUAL

JUNE 2010

bizhub 40P
A0DX013

INFORMATION FOR PARTS GUIDE MANUAL

 
To find correct Parts No., refer to the "HOW TO MAKE THE BEST USE OF THIS MANUAL" in the following page.

HOW TO MAKE THE BEST USE OF THIS MANUAL

- 1 When you order, please check the proper figures beforehand that are on Our Parts Guide Manual, and order with the appropriate figures.
- 2 For screws, Nuts, Washers, retaining rings and Pins which are used in this model, one letter is shown on the Standard parts column of Parts list and exploded diagrams.
- 3 In order to maintain safety of the product, some specific parts composed of this product are set up as "essential safety parts".
- 4 The assigned parts number for the "essential safety parts" is indicated as "SP00-****".
When replacing these parts, follow precautions for disassembling and installing which are listed in the Service Manual.
Do not use any parts that are not set up as
- 5 ♣ means that there are exclusive parts for each destination.
Please check the appropriate destination when you order.
- 6 Revision Mark
Marked as ▲ on the illustration shows that the revision has been made.
- 7 All rights reserved. (any reprints or quotations are prohibited.)
Use of this parts guide manual should be strictly supervised to avoid disclosure of confidential information.

01/19/2008

SYSTEM OUTLINE

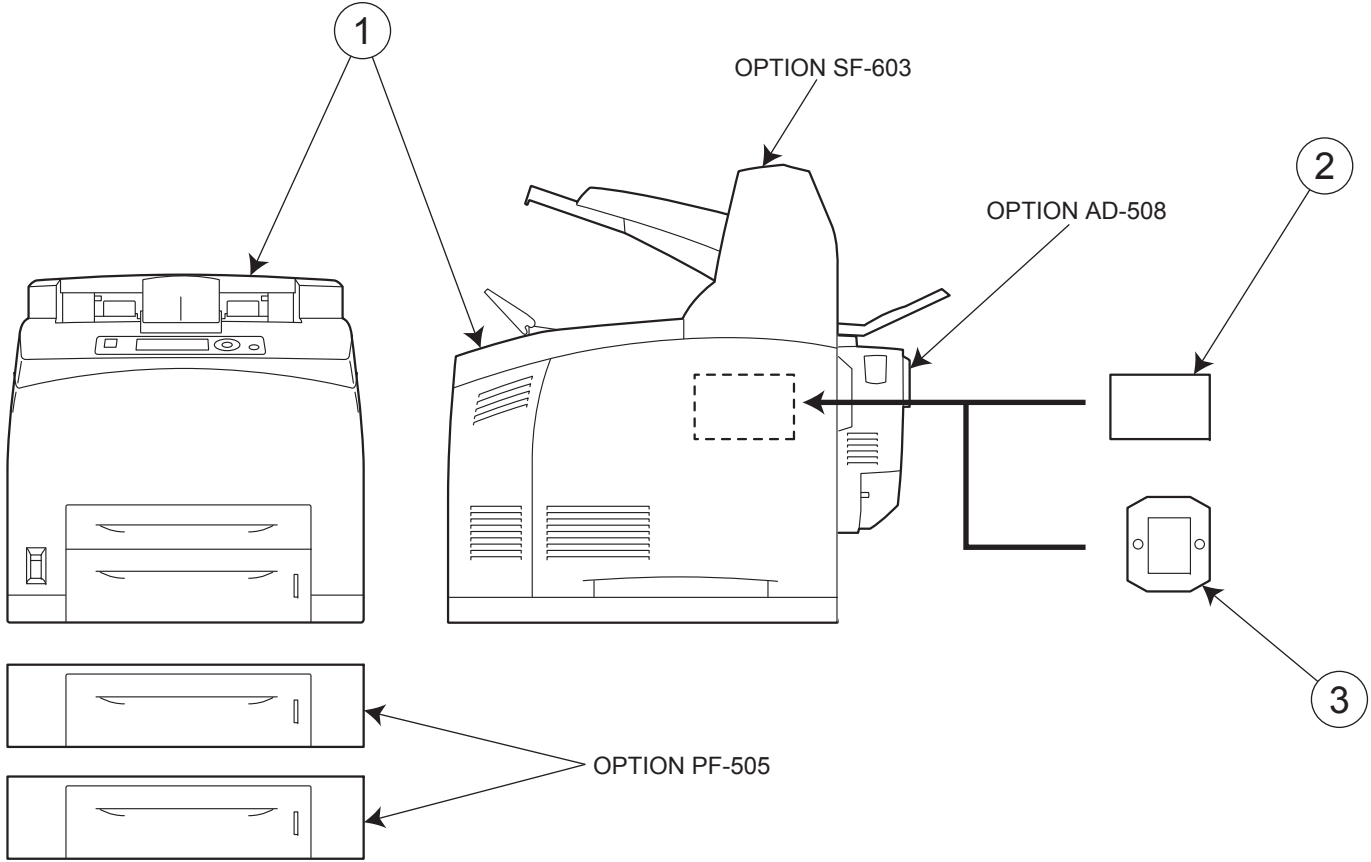

Parts Guide Manual "bizhub 40P" includes PF-505, AD-508 and SF-603.

GENERAL CONTENTS

No.	Description	Model
1	PRINTER B/W	bizhub 40P
2	OTHER OPTION	HD-512
3	OTHER OPTION	MK-717

DIAGRAM OF MAIN PARTS SECTION

CONTENTS

No.	DESCRIPTION	PAGE No.
1	EXTERNAL PARTS	P1
2	150 PAPER CASSETTE	P2
3	550 PAPER CASSETTE	P3
4	PAPER FEED SECTION	P4 P5
5	P/H FUSING SECTION	P6
6	PAPER EXIT SECTION	P7 P8
7	DRIVE SECTION	P9
8	ELECTRICAL COMPONENTS	P10
9	PF-505	P11 P12 P13
10	AD-508	P14
11	SF-603	P15

INDEX


Parts No.	Page No.
A00F 9420 00	1-11
A0DX 9421 00	1-12
A0DX M712 02	10-5
A0DX M71A 01	1-1
A0DX PP00 00	11-5
A0DX PP01 01	2-5
A0DX PP04 00	5-8
A0DX PP05 00	12-4
A0DX PP06 00	5-1
A0DX PP07 00	5-7
A0DX PP08 00	15-2
A0DX PP09 00	3-3
A0DX PP09 00	13-3
A0DX PP0A 00	2-4
A0DX PP0B 01	15-12
A0DX PP0C 01	2-6
A0DX PP0D 01	3-4
A0DX PP0E 00	15-10
A0DX PP0F 00	15-4
A0DX PP0G 00	6-2
A0DX PP0J 00	8-1
A0DX PP0Q 00	10-2
A0DX PP0R 00	10-2
A0DX PP0S 00	14-9
A0DX PP0S 00	15-7
A0DX PP0T 00	10-3
A0DX PP0V 00	11-3
A0DX PP0X 00	10-4
A0DX PP0Y 00	5-2
A0DX PP10 00	4-2
A0DX PP10 00	5-6
A0DX PP11 00	4-1
A0DX PP11 00	5-4
A0DX PP11 00	12-2
A0DX PP12 00	15-8
A0DX PP13 00	14-3
A0DX PP16 00	1-3
A0DX PP17 00	14-6
A0DX PP1A 00	15-6
A0DX PP1B 00	15-11

Parts No.	Page No.
A0DX PP1C 00	6-5
A0DX PP1D 00	9-1
A0DX PP1E 00	11-1
A0DX PP1F 00	14-7
A0DX PP1G 00	4-5
A0DX PP1J 00	15-5
A0DX PP1M 01	15-1
A0DX PP1R 00	2-2
A0DX PP1R 00	3-2
A0DX PP1R 00	4-4
A0DX PP1R 00	5-5
A0DX PP1R 00	12-1
A0DX PP1R 00	13-2
A0DX PP1U 00	1-4
A0DX PP1V 00	4-7
A0DX PP1W 00	6-4
A0DX PP1X 00	6-4
A0DX PP1Y 00	9-2
A0DX PP20 00	2-1
A0DX PP20 00	3-1
A0DX PP20 00	13-1
A0DX PP21 00	1-9
A0DX PP22 01	15-3
A0DX PP23 00	1-7
A0DX PP24 00	1-5
A0DX PP25 00	11-6
A0DX PP28 01	14-2
A0DX PP29 01	14-8
A0DX PP2B 00	6-3
A0DX PP2D 00	2-3
A0DX PP2E 01	14-4
A0DX PP2F 01	14-1
A0DX PP2G 00	11-4
A0DX PP2H 00	4-3
A0DX PP2H 00	5-3
A0DX PP2H 00	7-1
A0DX PP2H 00	12-3
A0DX PP2H 00	15-9
A0DX PP2J 00	11-7
A0DX PP2K 00	14-5

Parts No.	Page No.
A0DX PP2M 00	11-2
A0DX PP2N 00	6-1
A0DX PP2P 00	1-6
A0DX PP2R 00	1-8
A0DX PP2V 00	4-6
A0DX PP2X 01	1-2
A0DX PP30 00	1-10
A0DX PP33 00	10-7
A0DX PP41 00	15-13
A0DX PP43 00	10-1
A0DX PP44 00	10-1
A0DX PP45 00	6-6
A0DX PP46 00	6-7
A0DX PP51 00	6-8
A0DX PP52 00	6-9
A0DX PP53 00	7-2
A0DX PP55 00	7-3
A0FM 012	10-6
A0FM 0Y2	10-6

EXTERNAL PARTS

 P 1

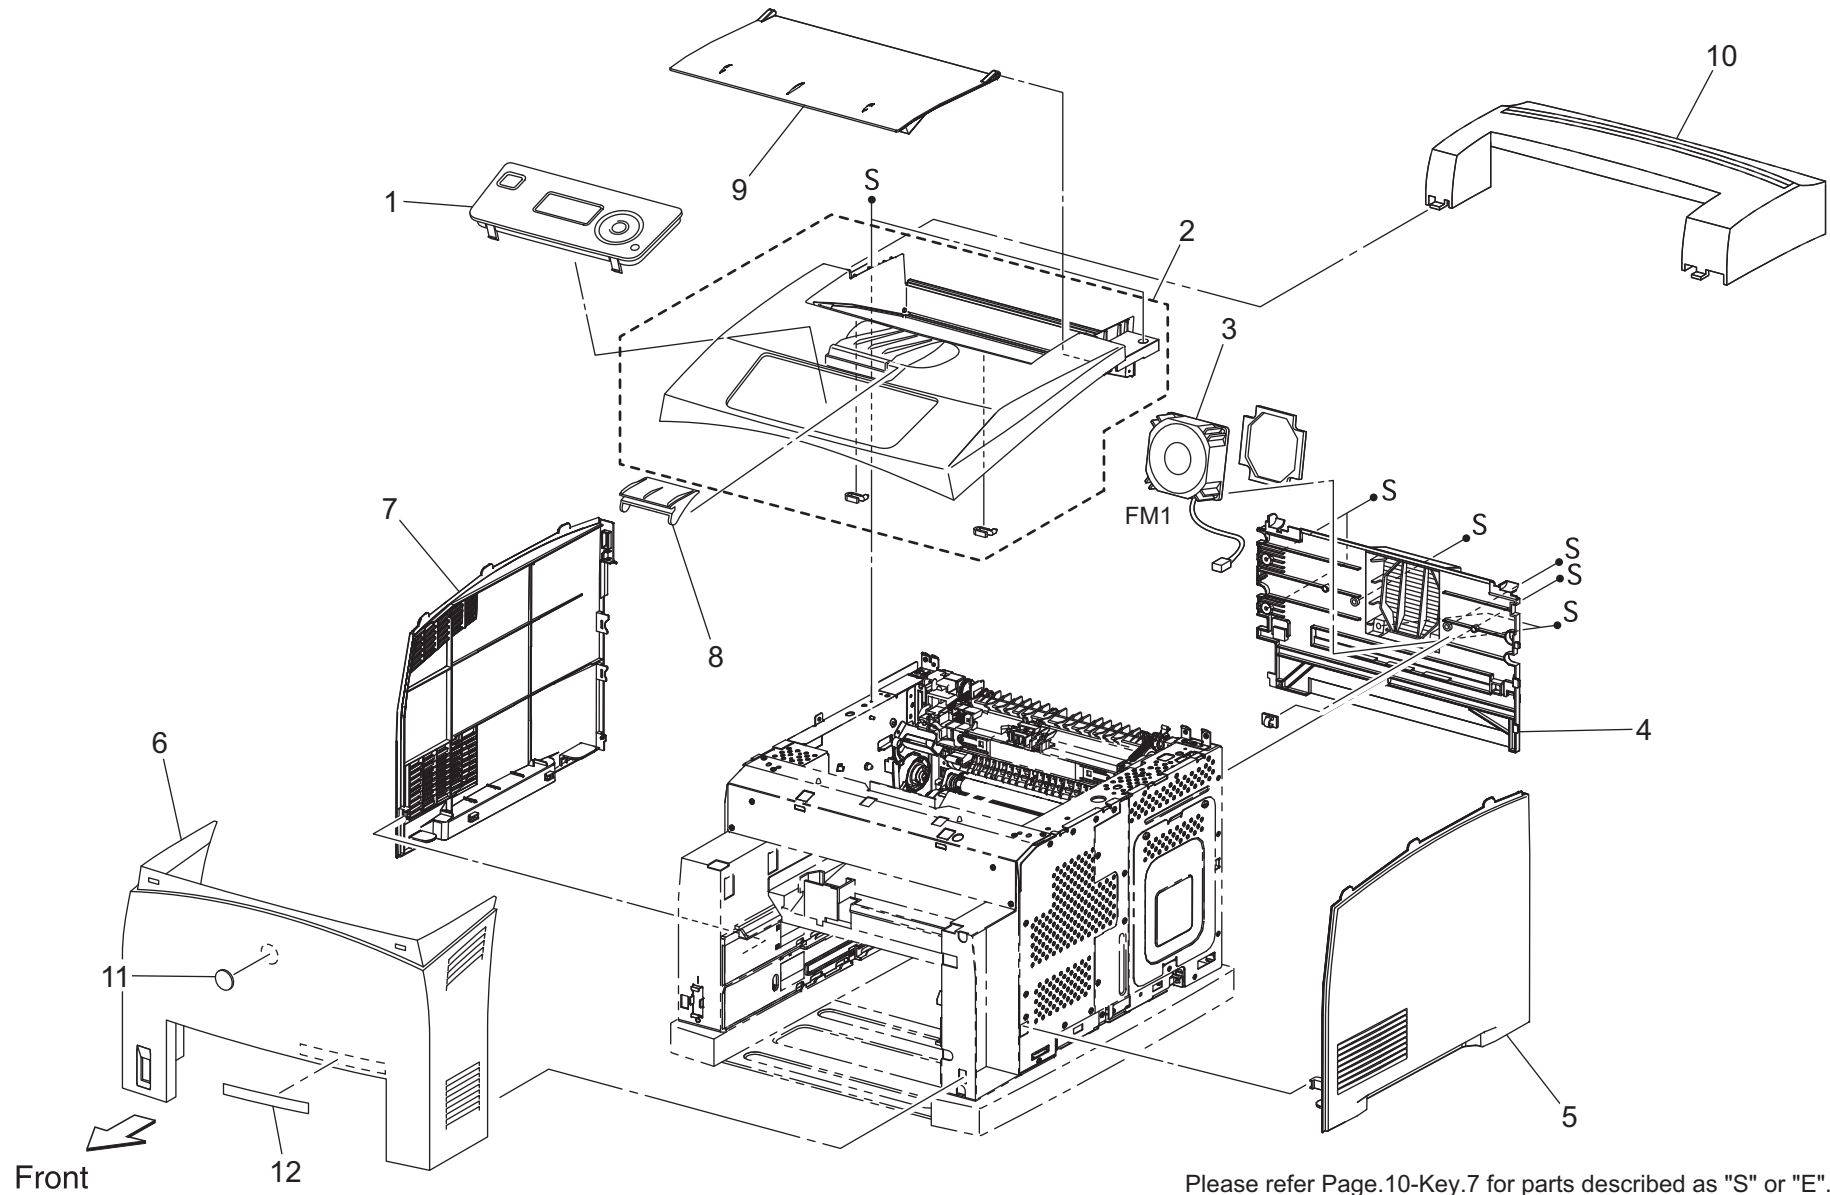

Please refer Page.10-Key.7 for parts described as "S" or "E".


bizhub 40P

EXTERNAL PARTS

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX M71A 01	OPERATION PANEL 34PPM		I	1	
2	A0DX PP2X 01	KIT TOP COVER		C	1	
3	A0DX PP16 00	FAN MAIN 80		C	1	
4	A0DX PP1U 00	COVER REAR		C	1	
5	A0DX PP24 00	COVER RIGHT		C	1	
6	A0DX PP2P 00	COVER FRONT		C	1	
7	A0DX PP23 00	COVER LEFT		C	1	
8	A0DX PP2R 00	COVER STOPPER		C	1	
9	A0DX PP21 00	COVER OPEN		C	1	
10	A0DX PP30 00	COVER EXIT J2 500		C	1	
11	A00F 9420 00	Label Logo Mark		C	1	
12	A0DX 9421 00	Label bizhub40P		C	1	

150 PAPER CASSETTE

 P 2

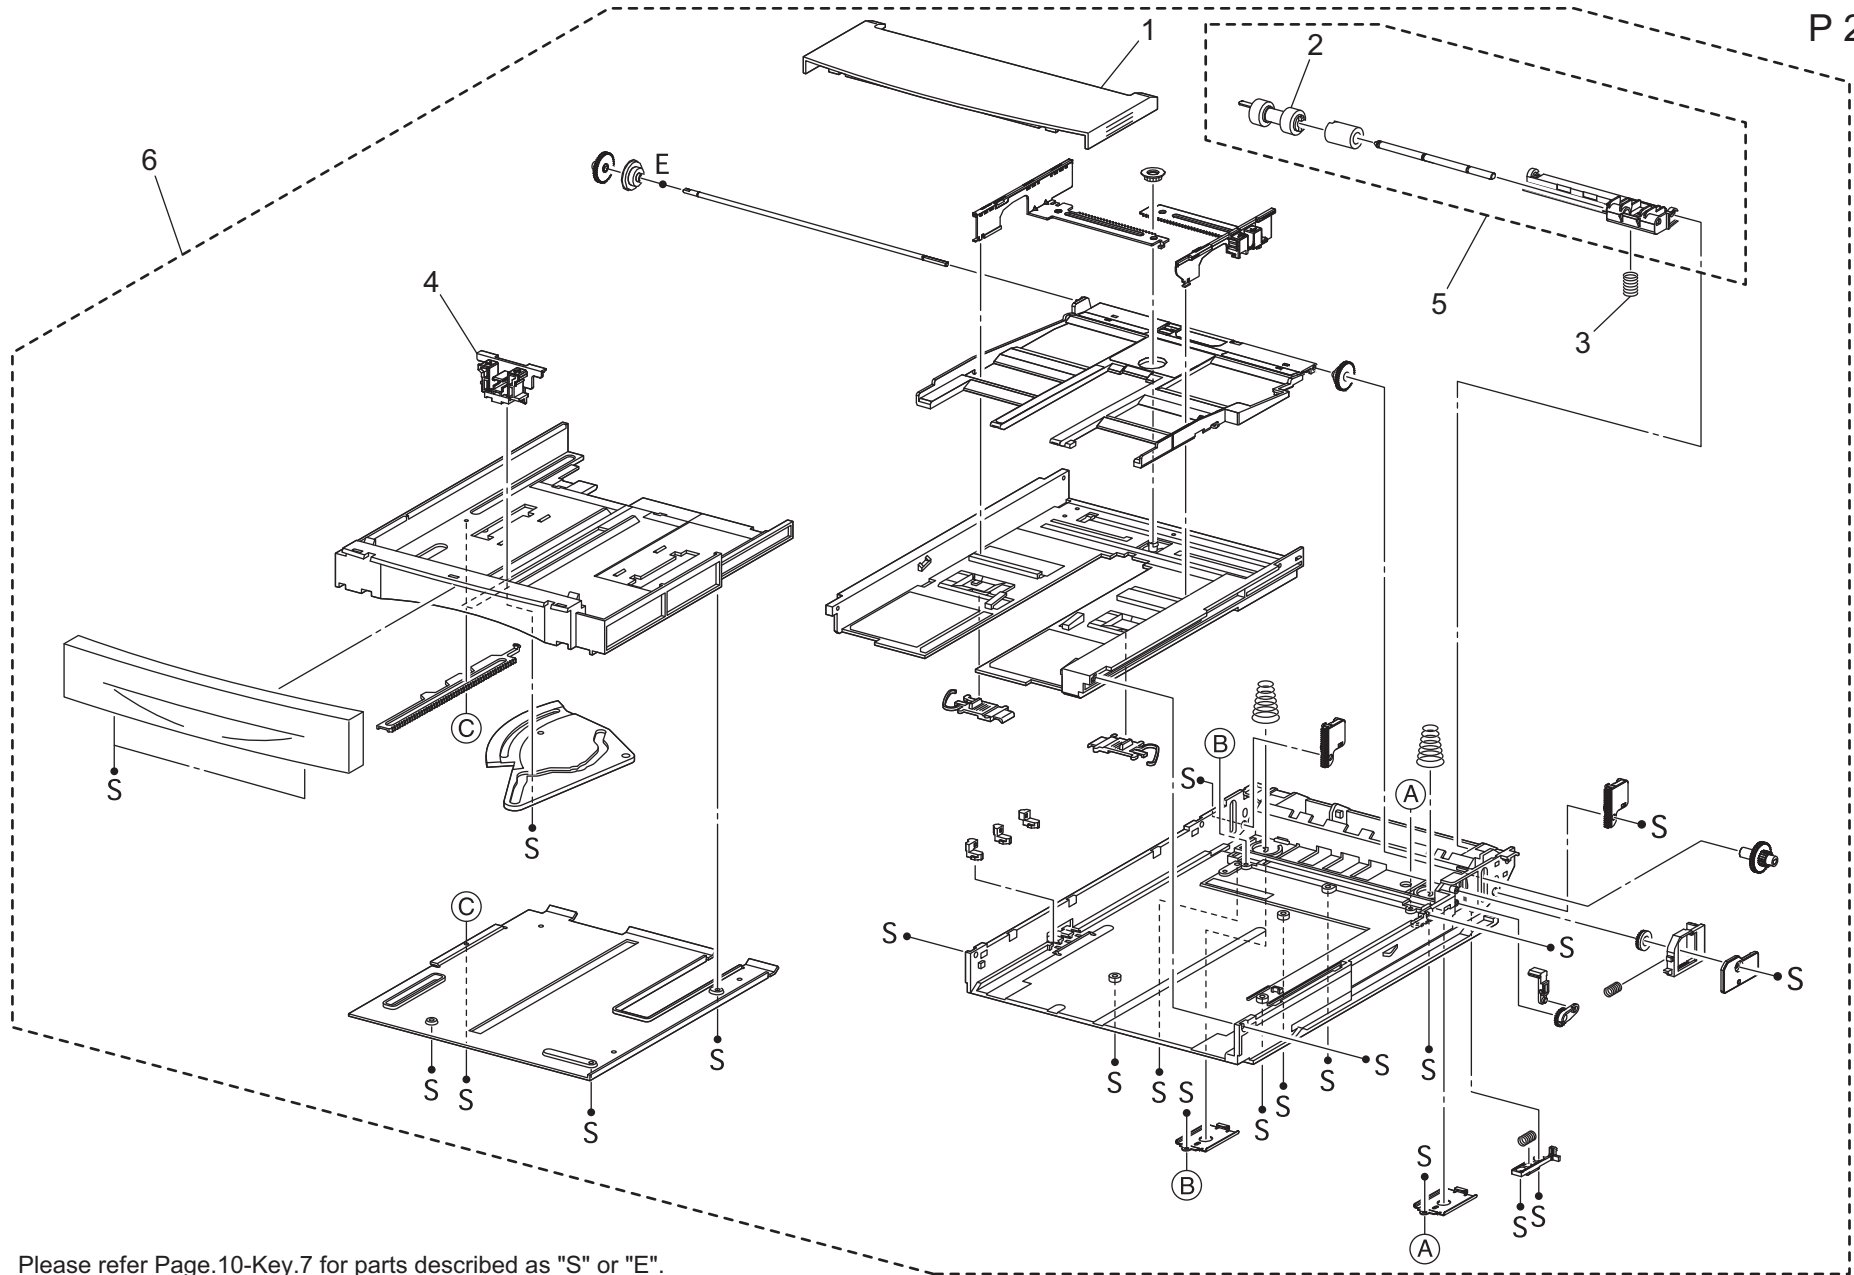


Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P

150 PAPER CASSETTE

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP20 00	COVER CST		C	1	
2	A0DX PP1R 00	ROLL ASSY RETARD		C	1	
3	A0DX PP2D 00	SPRING RETARD		C	1	
4	A0DX PP0A 00	GUIDE END 150		C	1	
5	A0DX PP01 01	HOLDER ASSY RETARD		C	1	
6	A0DX PP0C 01	150 PAPER CASSETTE		C	1	

 550 PAPER CASSETTE

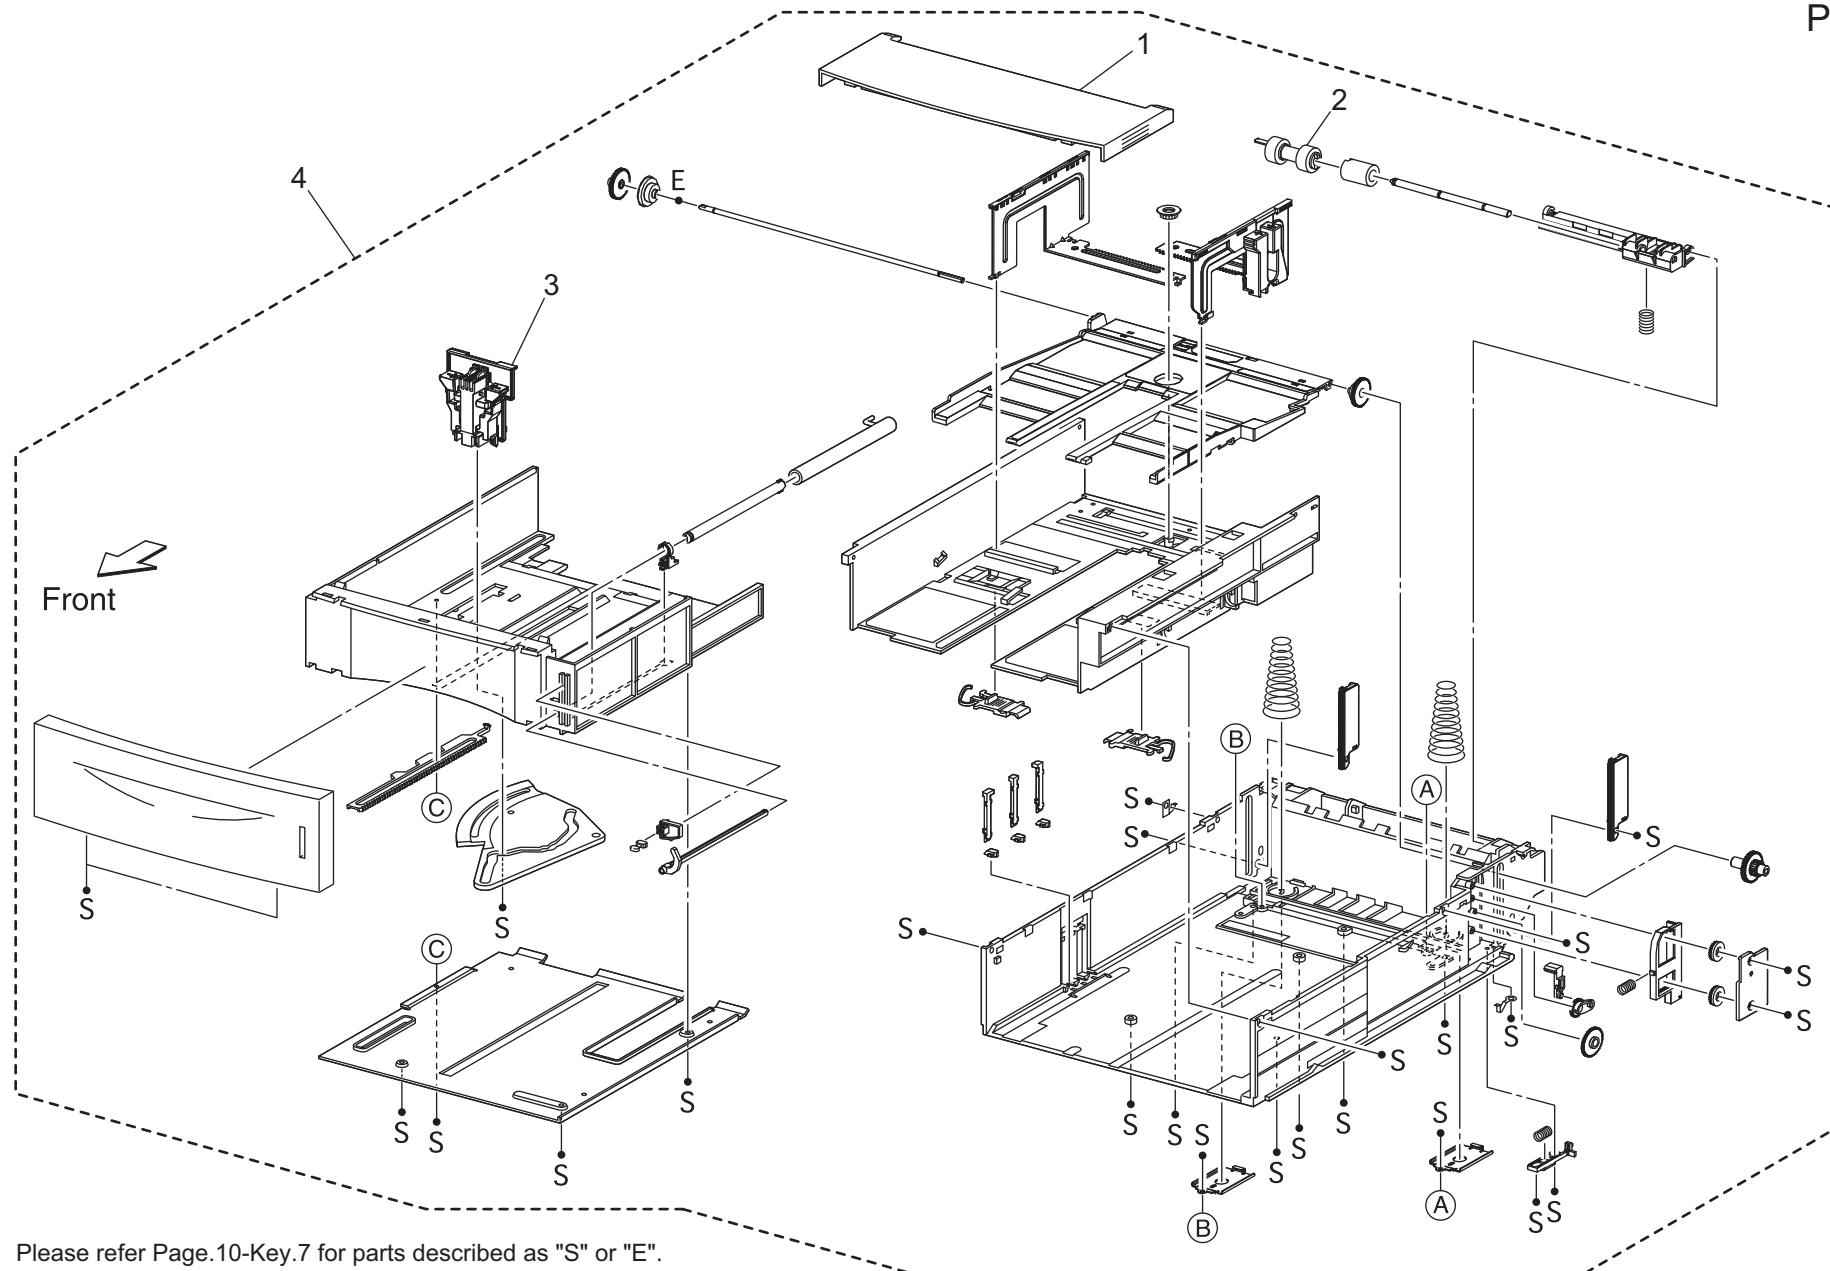


Please refer Page.10-Key.7 for parts described as "S" or "E".

550 PAPER CASSETTE

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP20 00	COVER CST		C	1	
2	A0DX PP1R 00	ROLL ASSY RETARD		C	1	
3	A0DX PP09 00	GUIDE END 550		C	1	
4	A0DX PP0D 01	550 PAPER CASSETTE		C	1	

PAPER FEED SECTION

 P 4

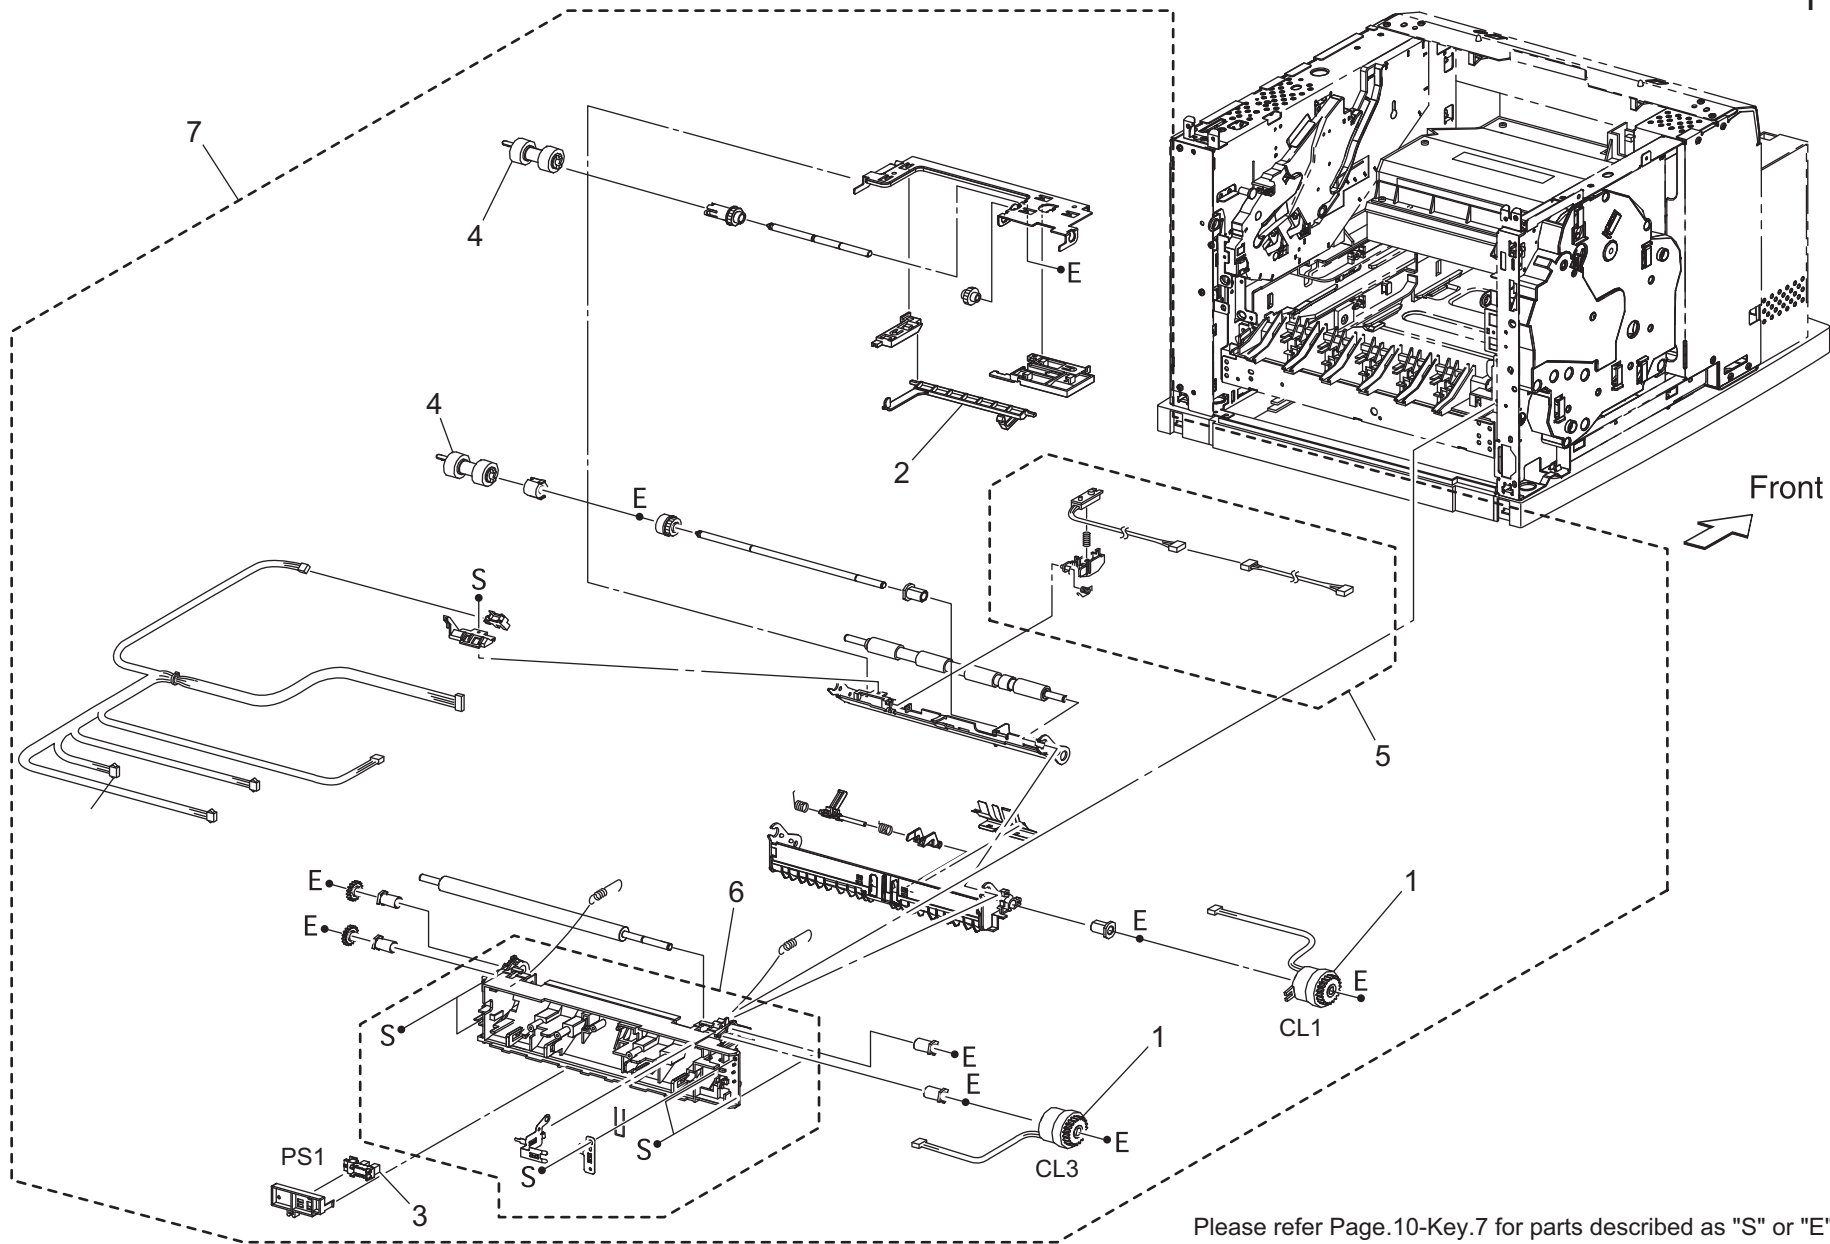

Please refer Page.10-Key.7 for parts described as "S" or "E".


bizhub 40P

PAPER FEED SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP11 00	CLUTCH ASSY PH		C	2	
2	A0DX PP10 00	ACTUATOR NO PAPER		C	1	
3	A0DX PP2H 00	SENSOR OCT		I	1	
4	A0DX PP1R 00	ROLL ASSY RETARD		C	2	
5	A0DX PP1G 00	SENSOR TONER ASSEMBLY		C	1	
6	A0DX PP2V 00	KIT CHUTE REGI		C	1	
7	A0DX PP1V 00	150-45 FEEDER ASSY		C	1	

PAPER FEED SECTION

 P 5

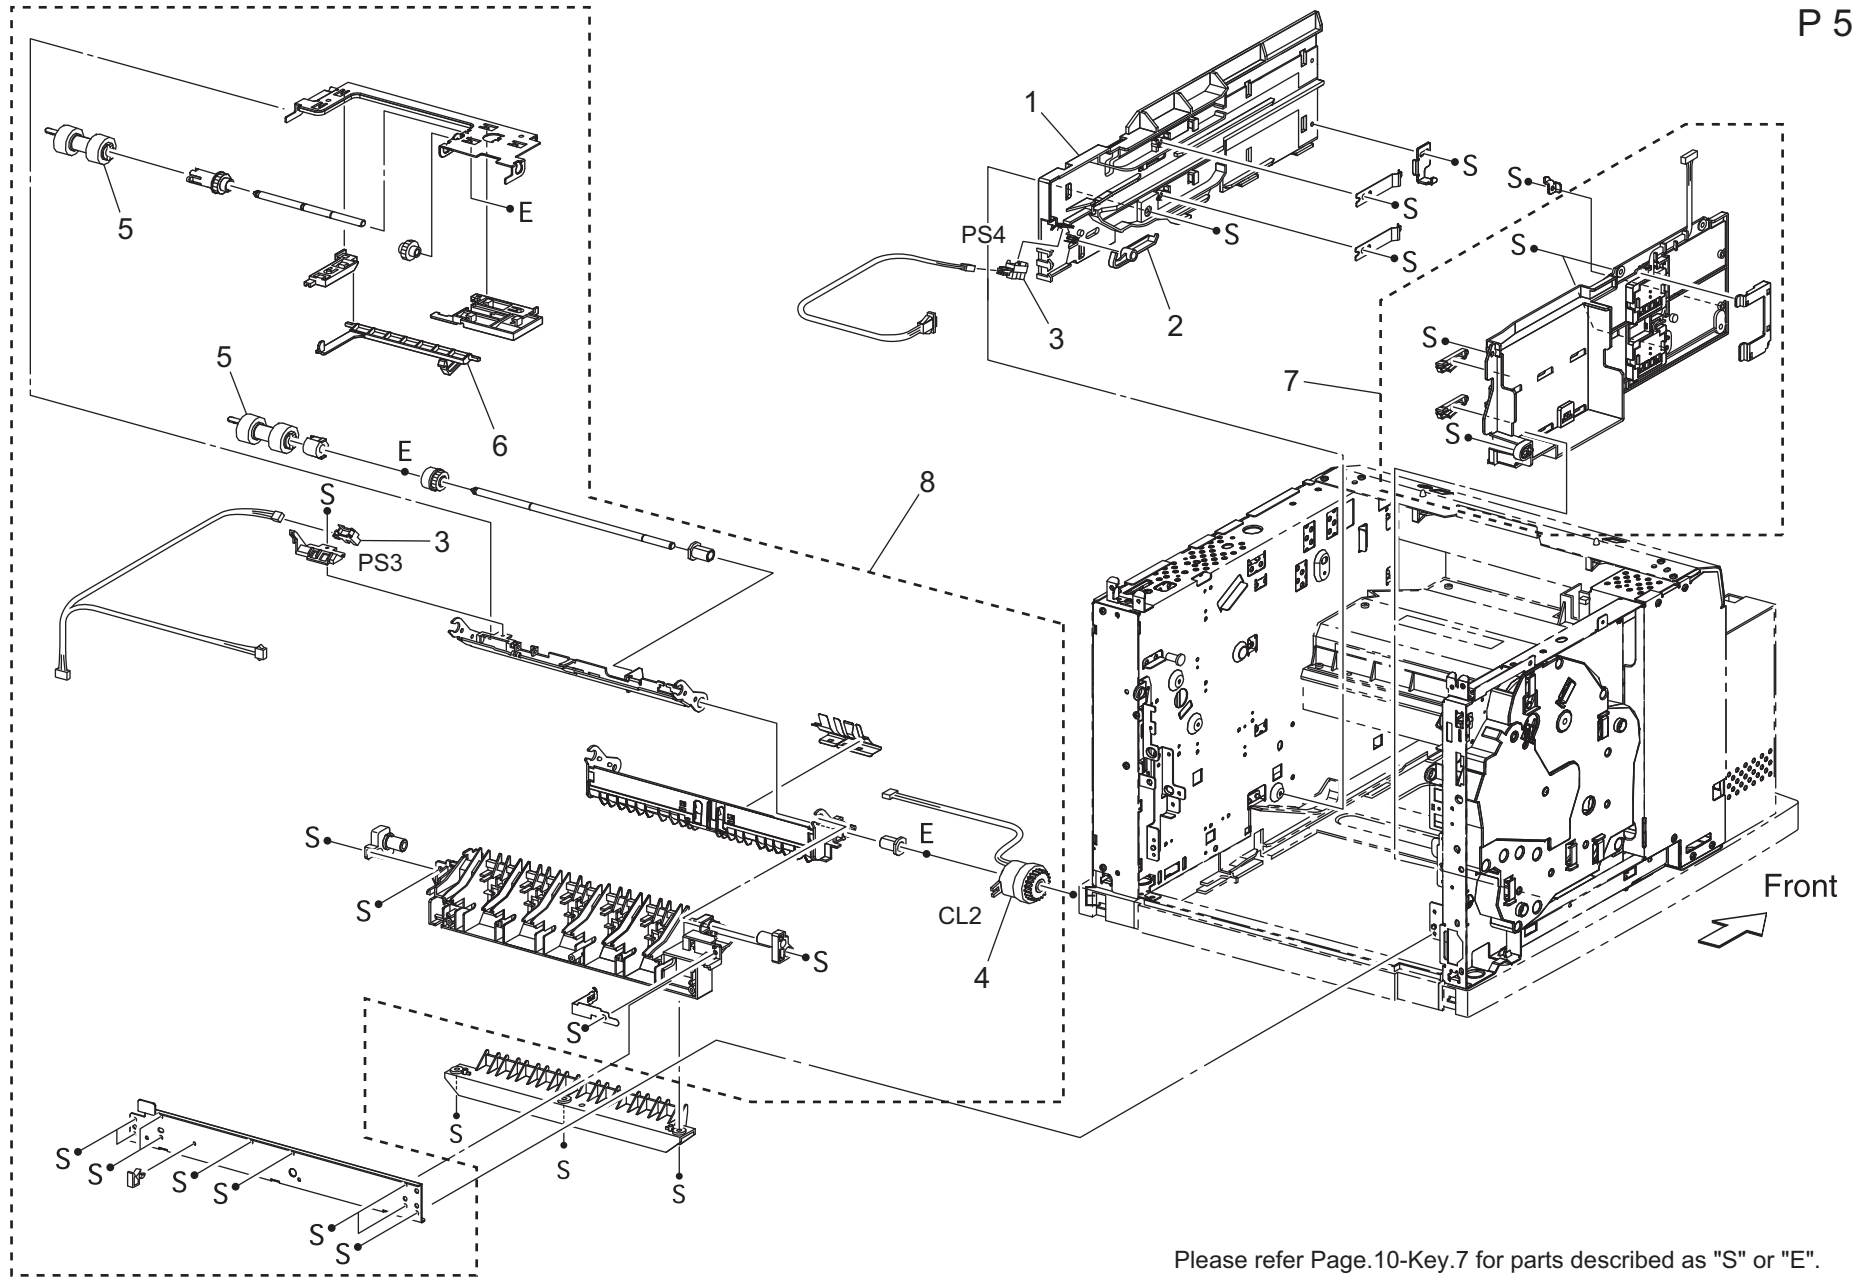


Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P


PAPER FEED SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP06 00	GUIDE TRAY RIGHT		D	1	
2	A0DX PP0Y 00	ACTUATOR		C	1	
3	A0DX PP2H 00	SENSOR OCT		I	2	
4	A0DX PP11 00	CLUTCH ASSY PH		C	1	
5	A0DX PP1R 00	ROLL ASSY RETARD		C	2	
6	A0DX PP10 00	ACTUATOR NO PAPER		C	1	
7	A0DX PP07 00	GUIDE TRAY LEFT		C	1	
8	A0DX PP04 00	FEEDER2 ASSY 250		C	1	

P/H FUSING SECTION

改訂版 REVISED EDITION	日付 DATE
	FEBRUARY 2010

 P 6

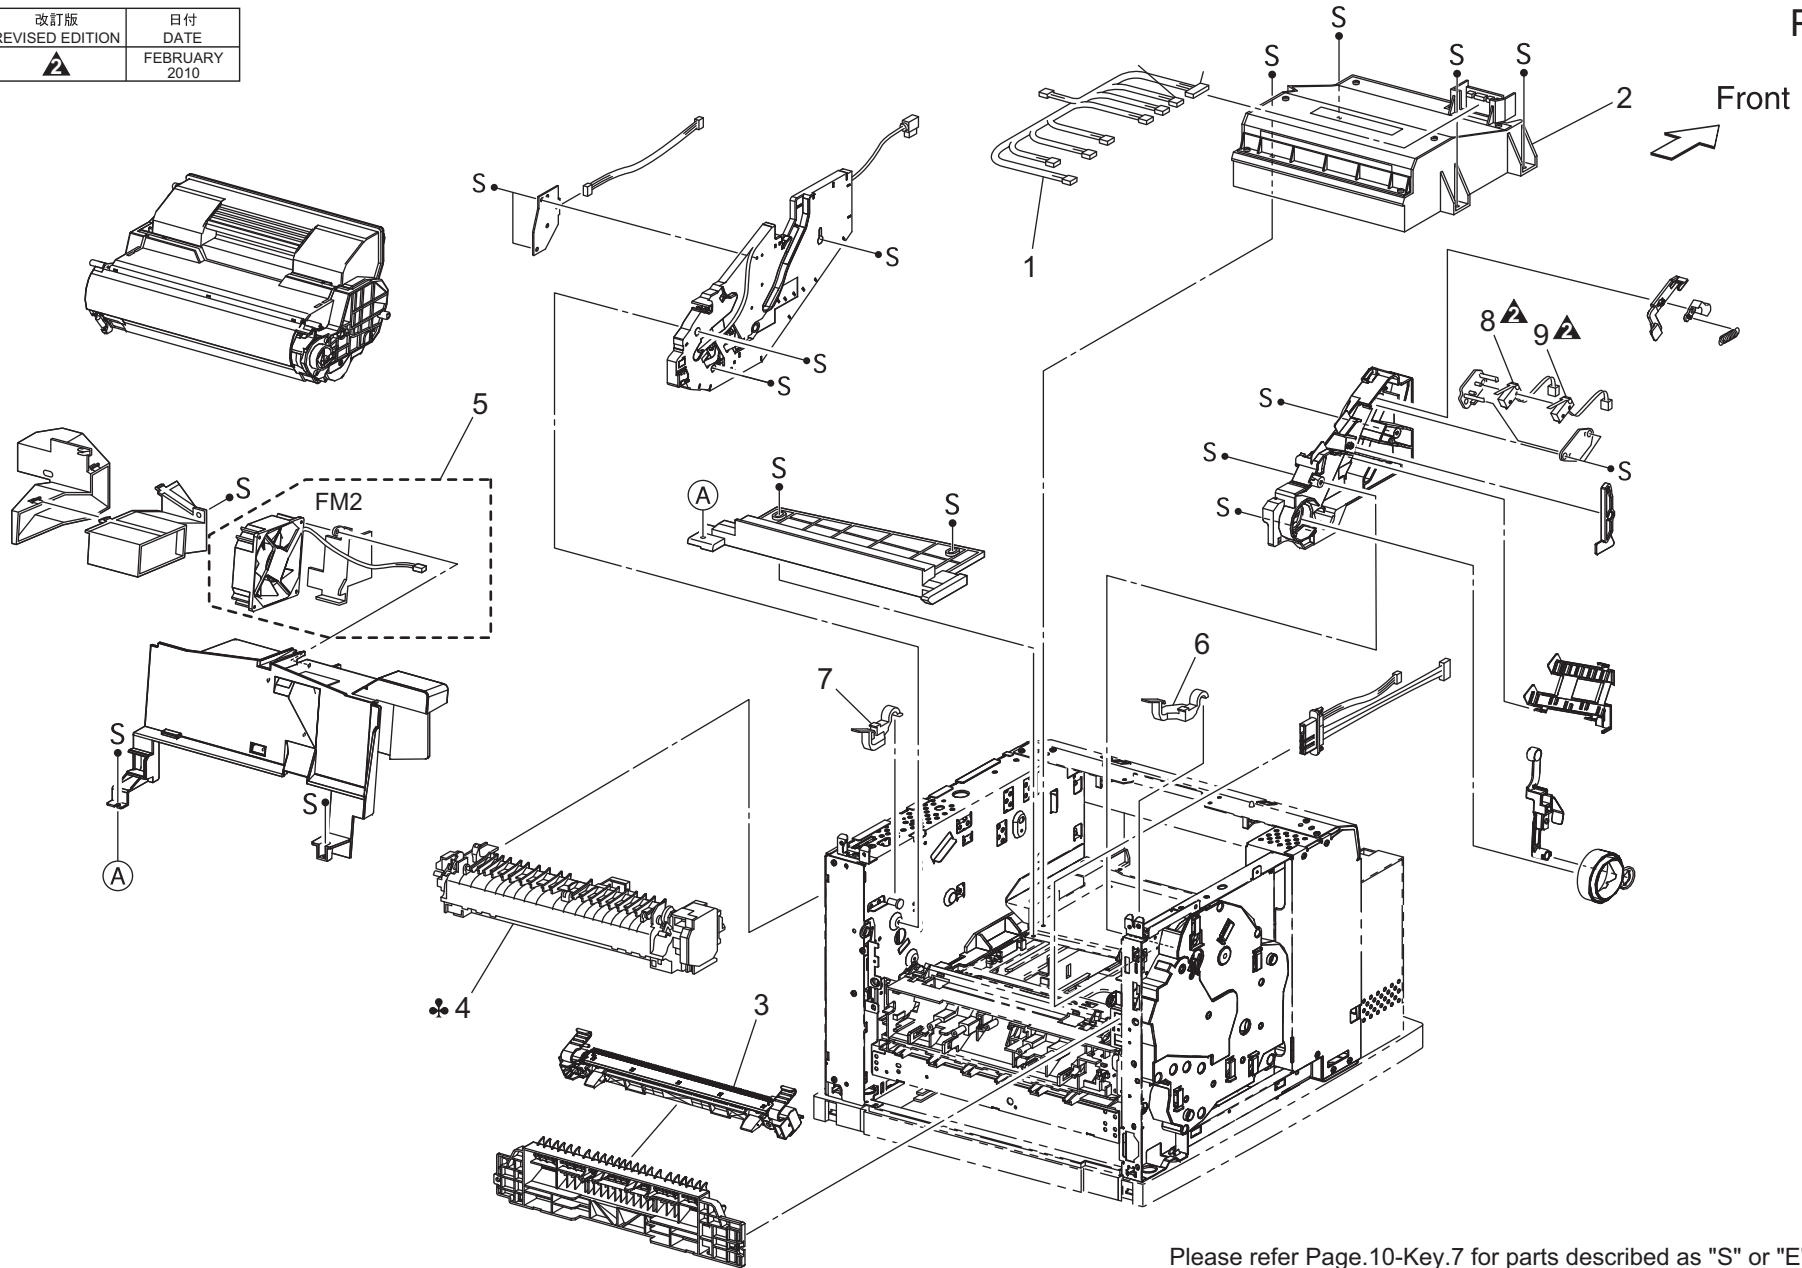

Please refer Page.10-Key.7 for parts described as "S" or "E".


bizhub 40P

P/H FUSING SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP2N 00	HARNESS ASSY ROS 34PPM		D	1	
2	A0DX PP0G 00	ROS ASSY 45PPM		I	1	
3	A0DX PP2B 00	HOUSING ASSY BTR		C	1	
4	A0DX PP1W 00	FUSER ASSY 45PPM 110V	B	C	1	
4	A0DX PP1X 00	FUSER ASSY 45PPM 220V	C,D1,D3	C	1	
5	A0DX PP1C 00	FAN SUB		B	1	
6	A0DX PP45 00	LEVER FUSER LEFT		C	1	
7	A0DX PP46 00	LEVER FUSER RIGHT(34PPM)		C	1	
8	A0DX PP51 00	INTERLOCK SW		I	1	
9	A0DX PP52 00	INTERLOCK SW		I	1	

PAPER EXIT SECTION

改訂版 REVISED EDITION	日付 DATE
▲	FEBRUARY 2010

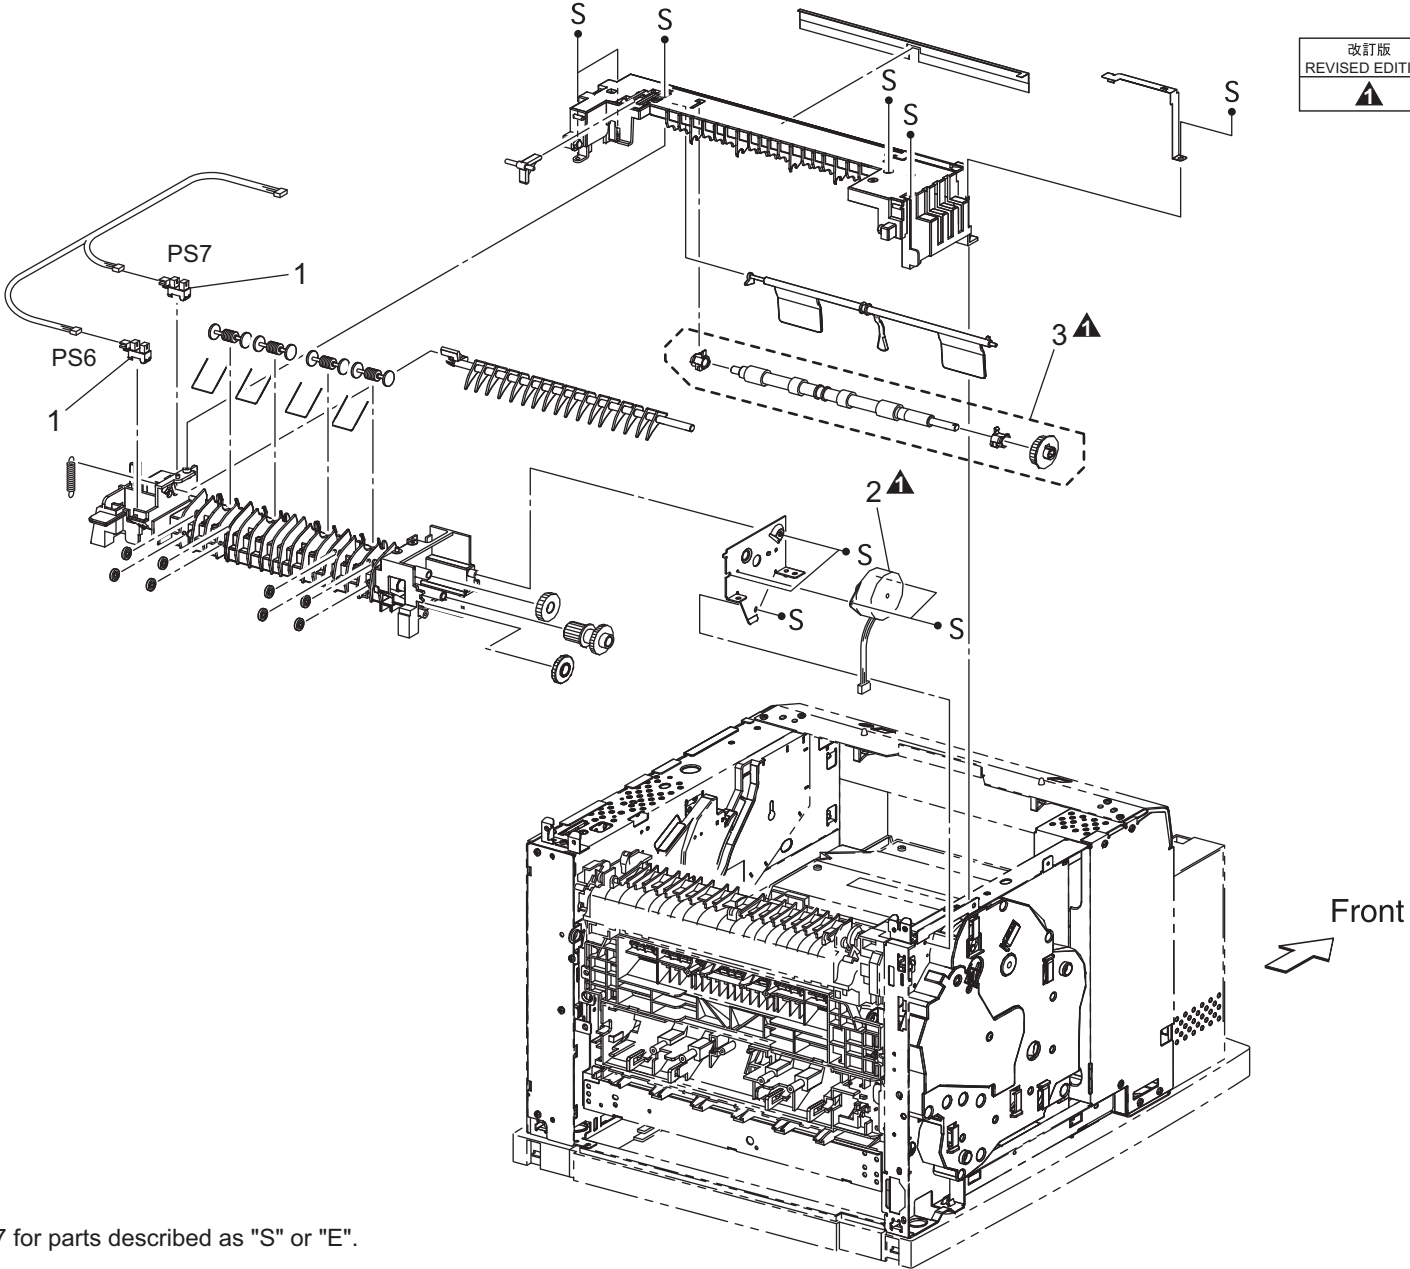 


Please refer Page.10-Key.7 for parts described as "S" or "E".

PAPER EXIT SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP2H 00	SENSOR OCT		I	2	
2	A0DX PP53 00	MOTOR ASSY EXIT		B	1	
3	A0DX PP55 00	KIT ROLL EXIT		C	1	

PAPER EXIT SECTION

 P 8

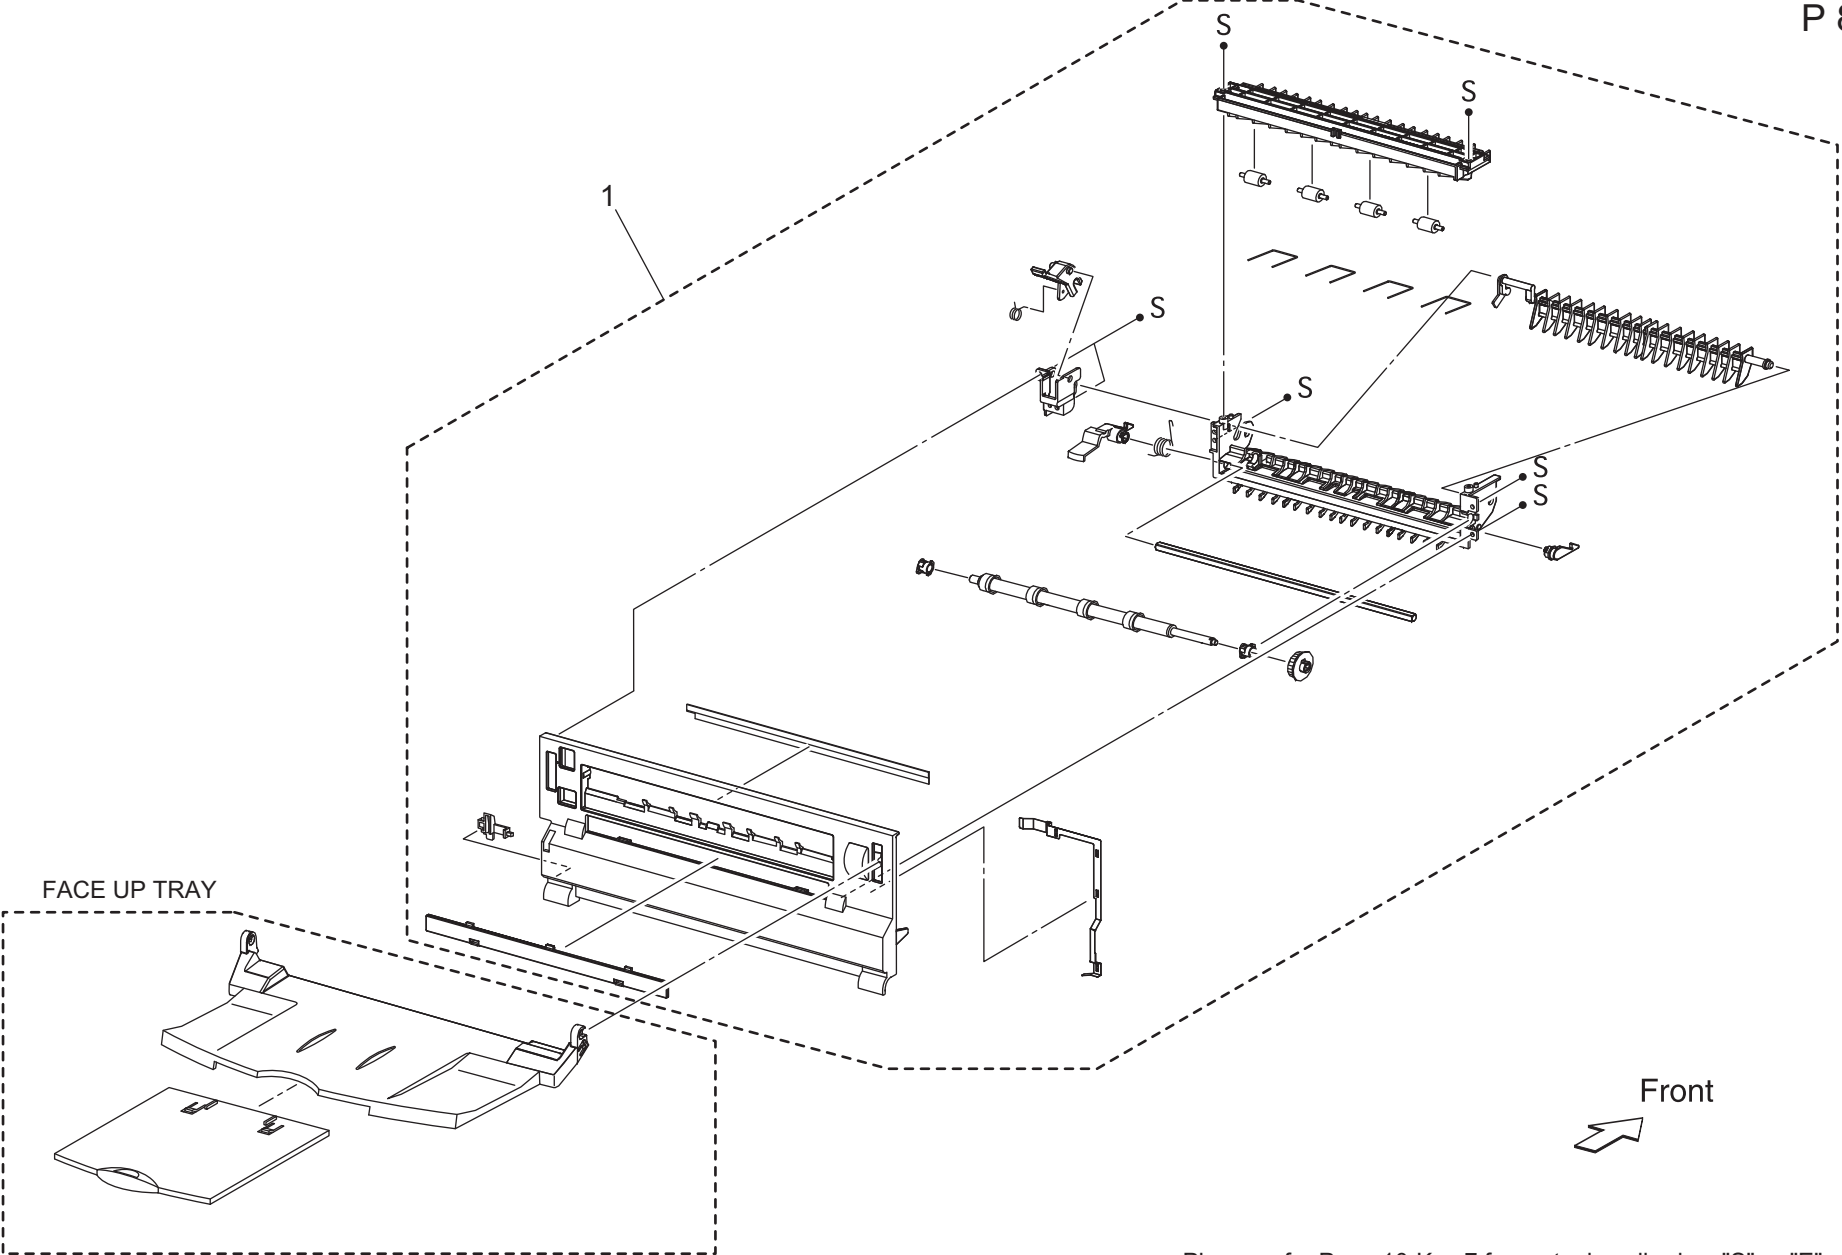


Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P

PAPER EXIT SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP0J 00	COVER REAR 500 34PPM		C	1	

 DRIVE SECTION

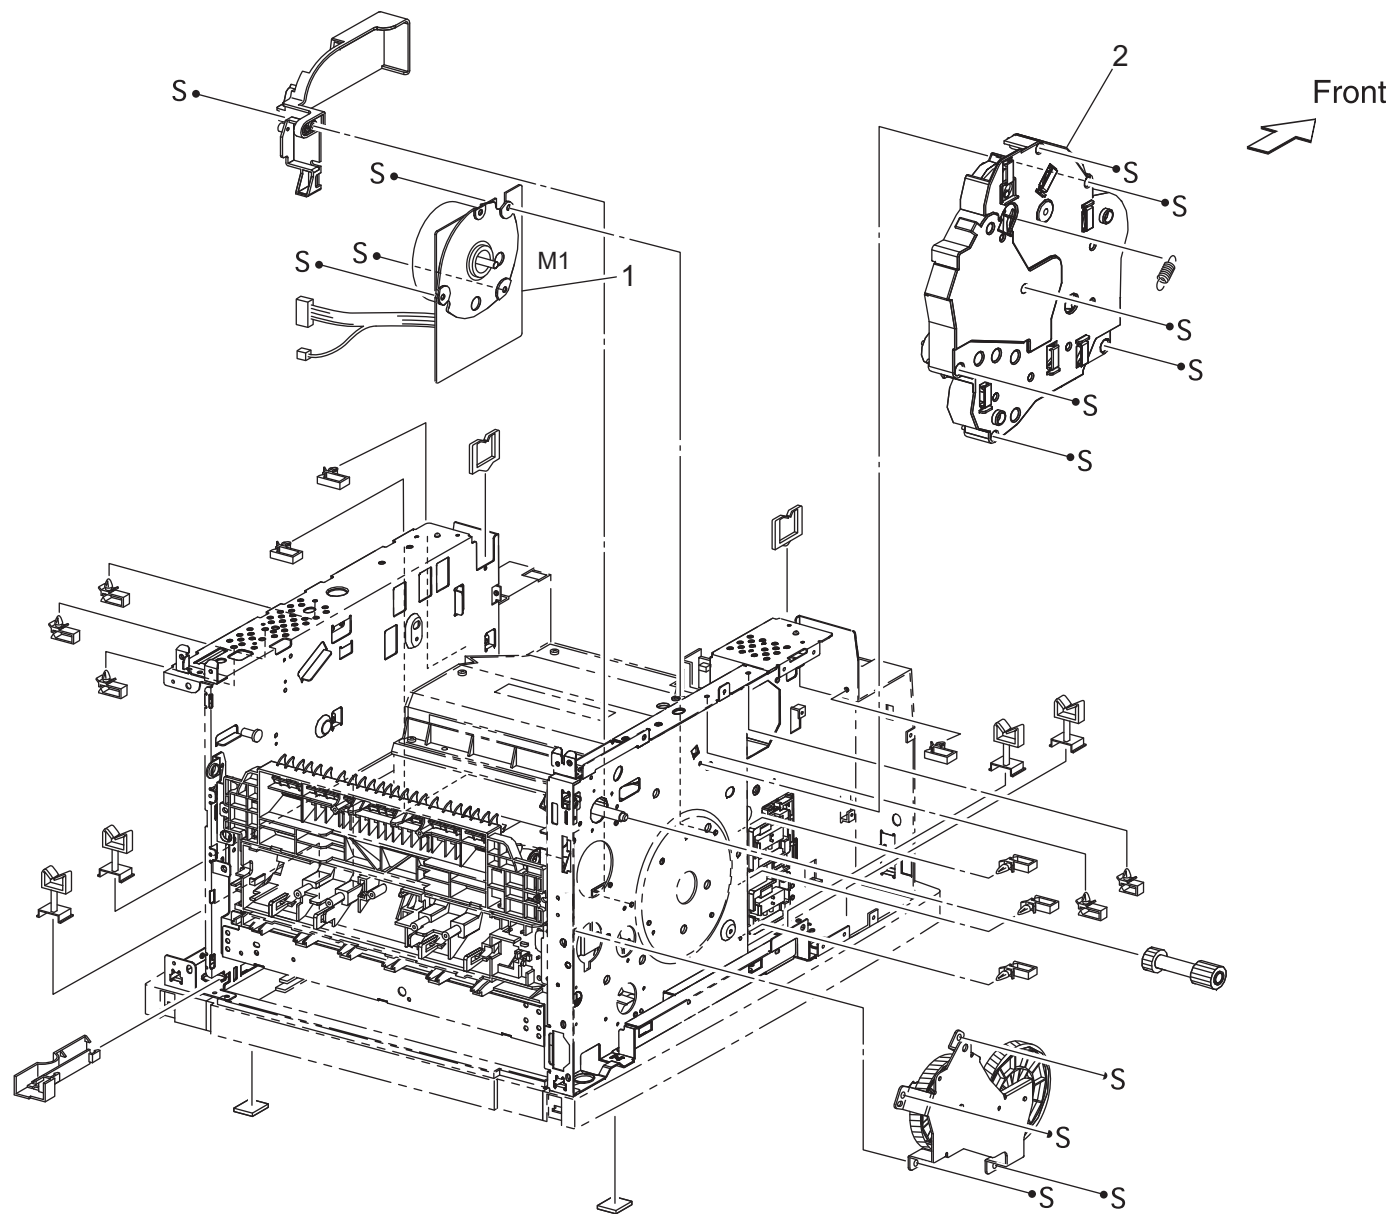


Please refer Page.10-Key.7 for parts described as "S" or "E".

DRIVE SECTION

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP1D 00	MAIN MOTOR		C	1	
2	A0DX PP1Y 00	GEAR ASSY HOUSING		C	1	

 ELECTRICAL COMPONENTS

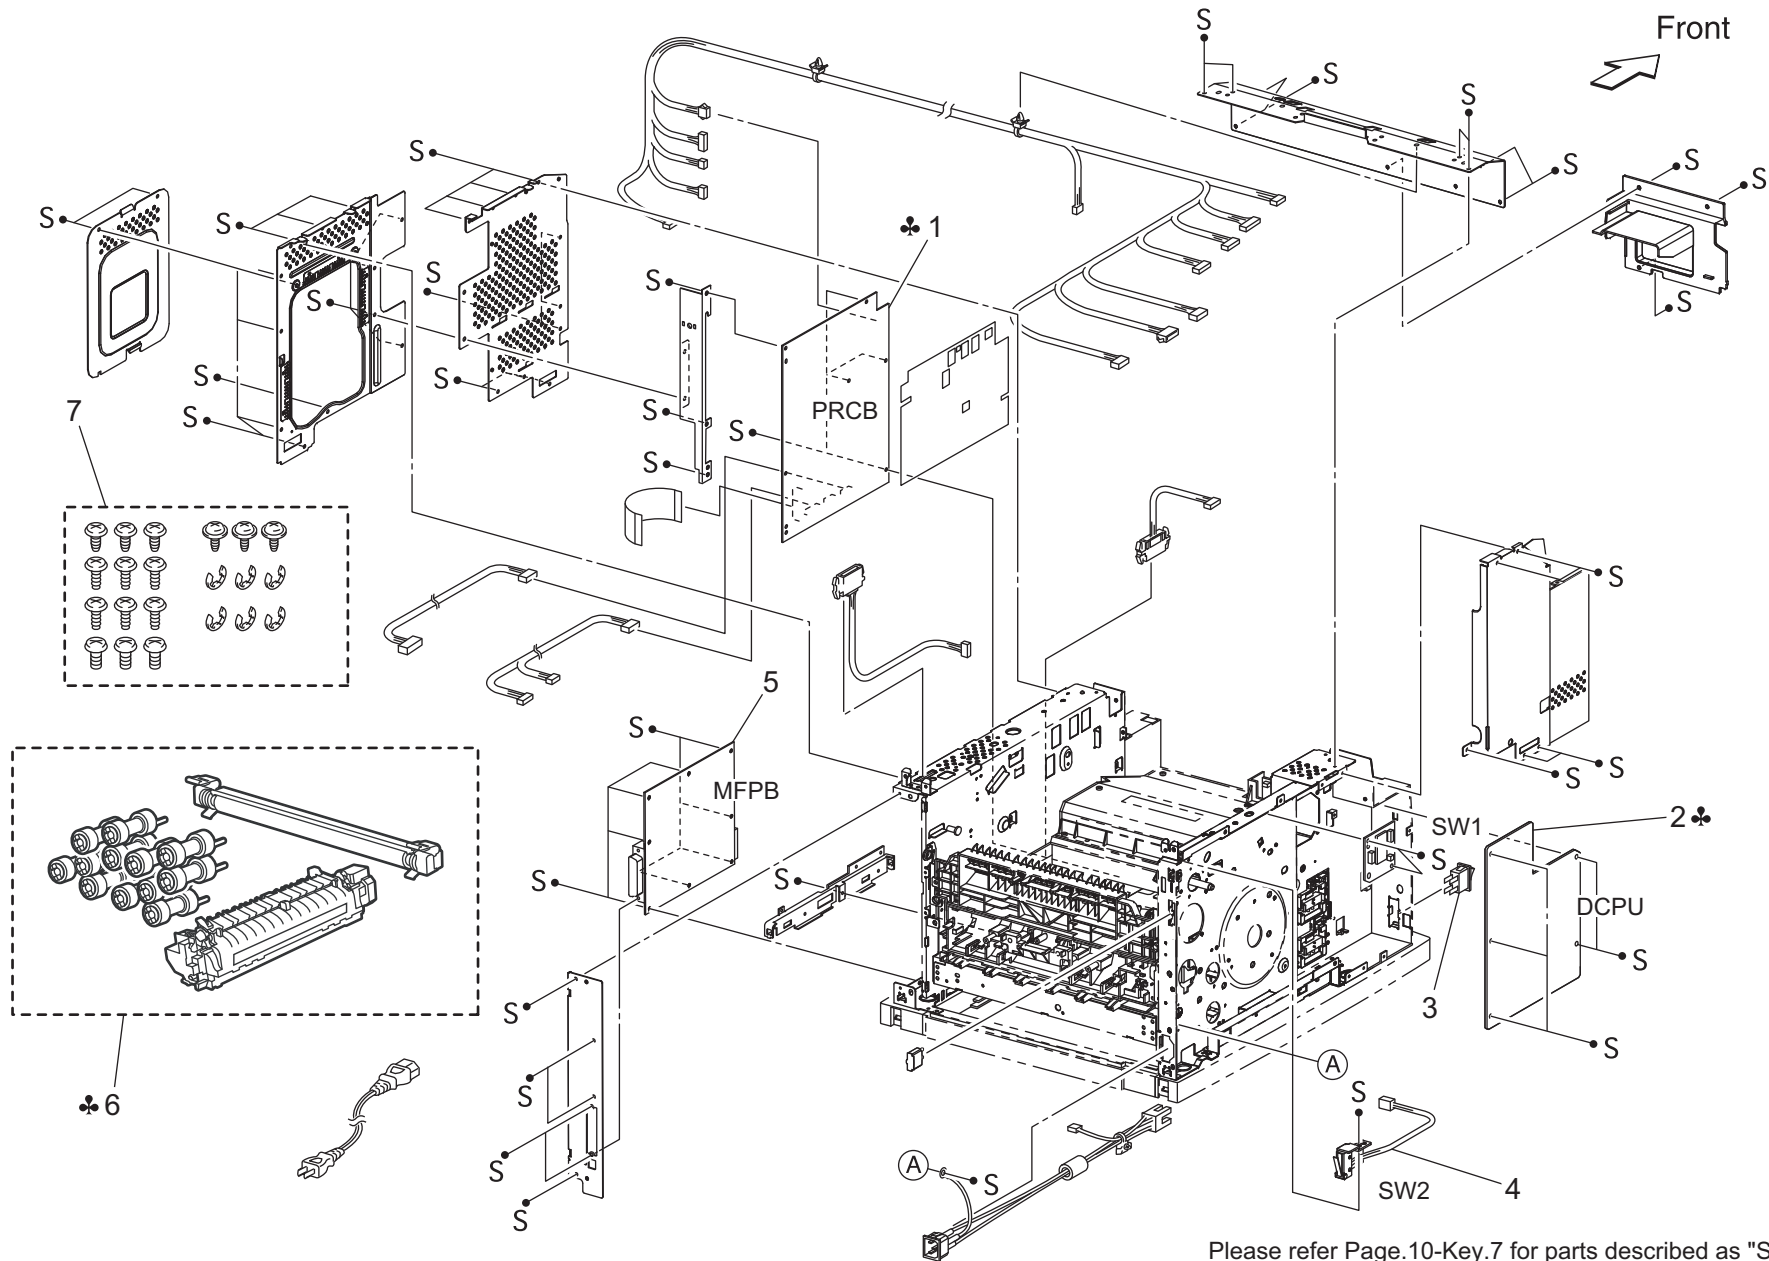


Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P


ELECTRICAL COMPONENTS

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP44 00	KIT HVPS/MCU KM 45-BIZHUB 220V	C,D1,D3	I	1	
1	A0DX PP43 00	KIT HVPS/MCU KM 45-BIZHUB 110V	B	I	1	
2	A0DX PP0Q 00	LVPS 110V	B	I	1	
2	A0DX PP0R 00	LVPS 220V	C,D1,D3	I	1	
3	A0DX PP0T 00	POWER SWITCH		C	1	
4	A0DX PP0X 00	INTERLOCK S/W REAR		C	1	
5	A0DX M712 02	Controller PWB assembly		I	1	
6	A0FM 012	Maintenance Kit 110V	B	B	1	
6	A0FM 0Y2	Maintenance Kit 220V	C,D1,D3	B	1	
7	A0DX PP33 00	KIT SCREW		C	1	

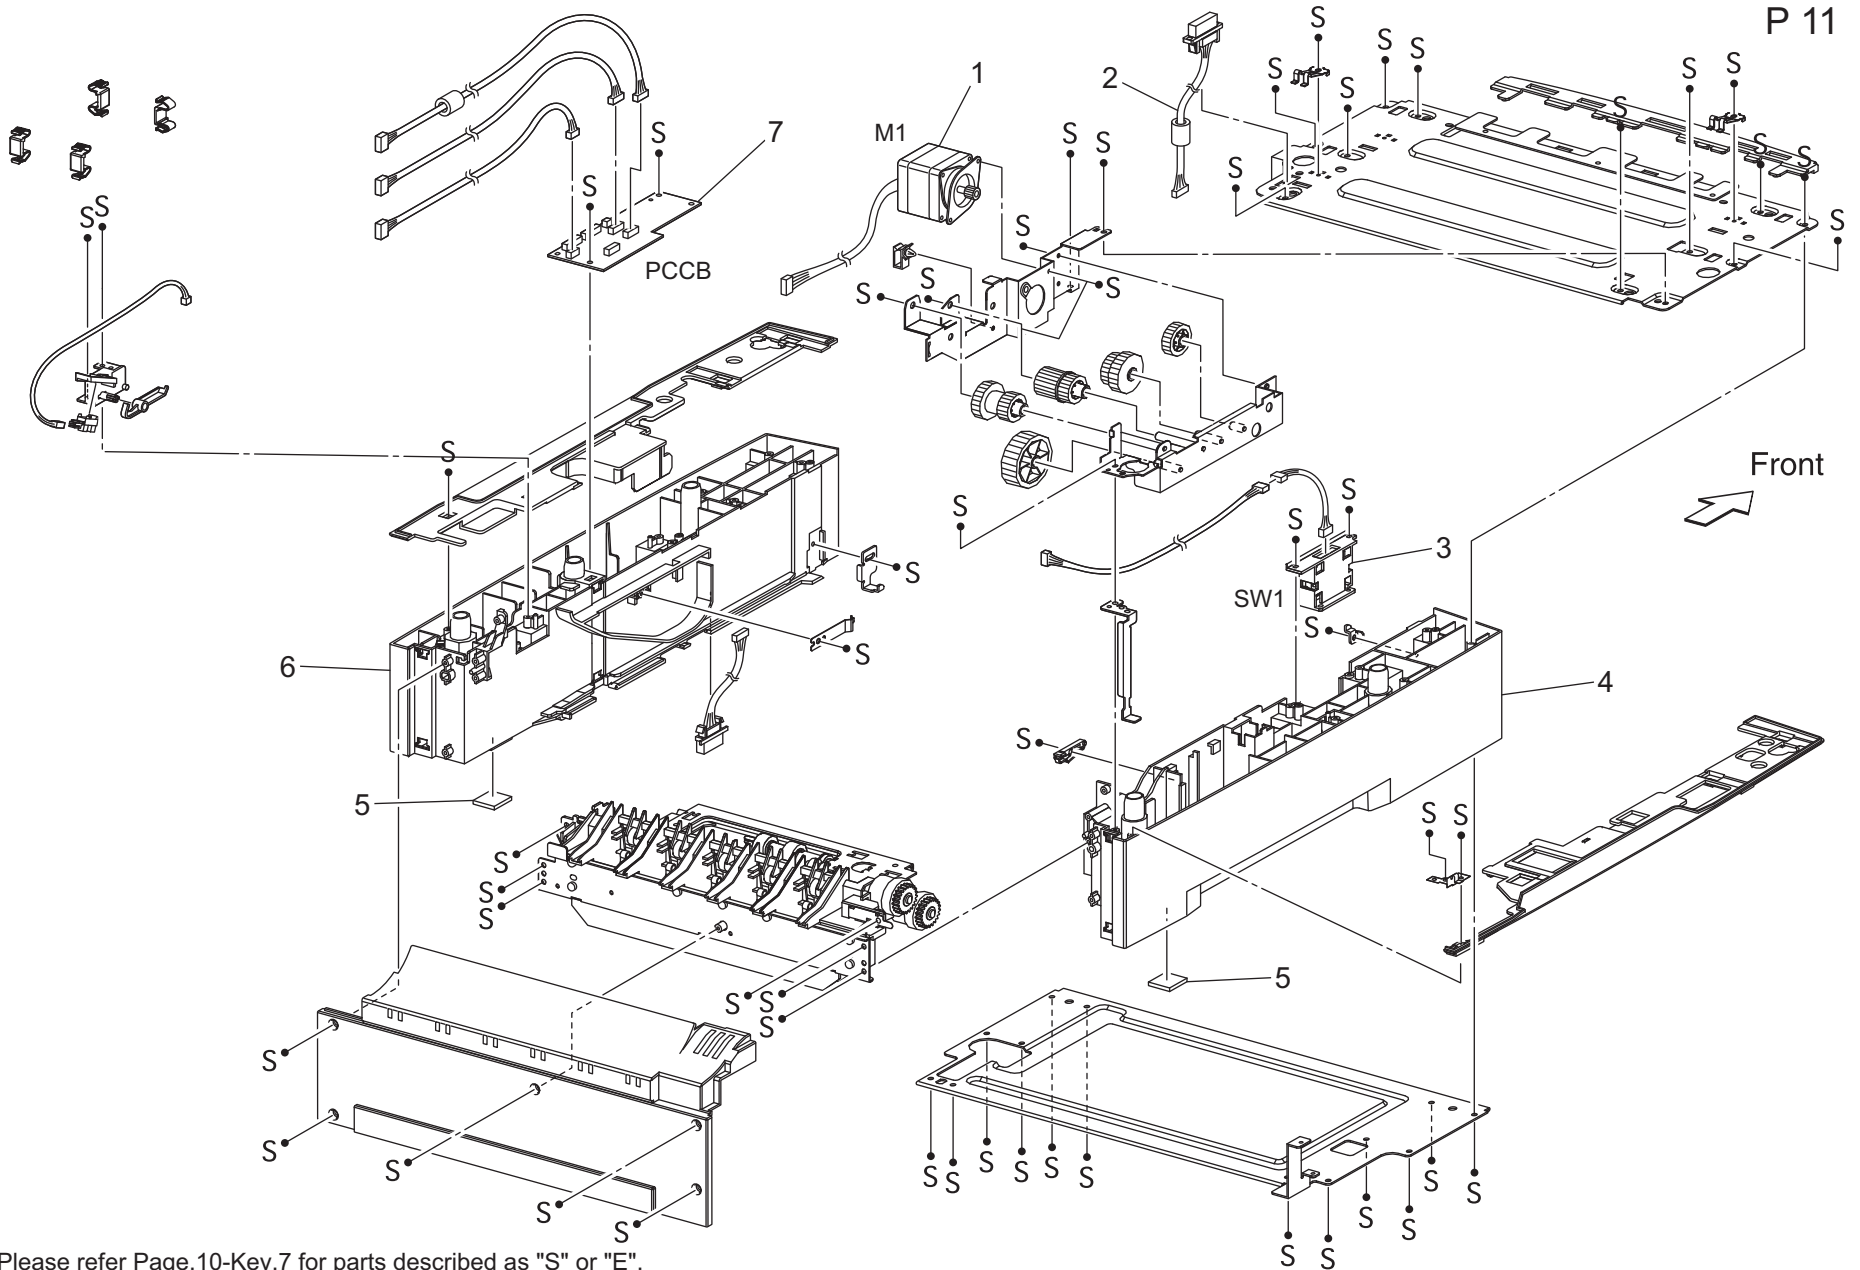 

Please refer Page.10-Key.7 for parts described as "S" or "E".


Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP1E 00	MOTOR ASSY OPT FDR		C	1	
2	A0DX PP2M 00	HARNES ASSY FDR2		D	1	
3	A0DX PP0V 00	OPT ASSY SIZE		C	1	
4	A0DX PP2G 00	FRAME CVR L550		C	1	
5	A0DX PP00 00	FOOT		C	2	
6	A0DX PP25 00	FRAME CVR R550		C	1	
7	A0DX PP2J 00	PWBA FEEDER 550		I	1	

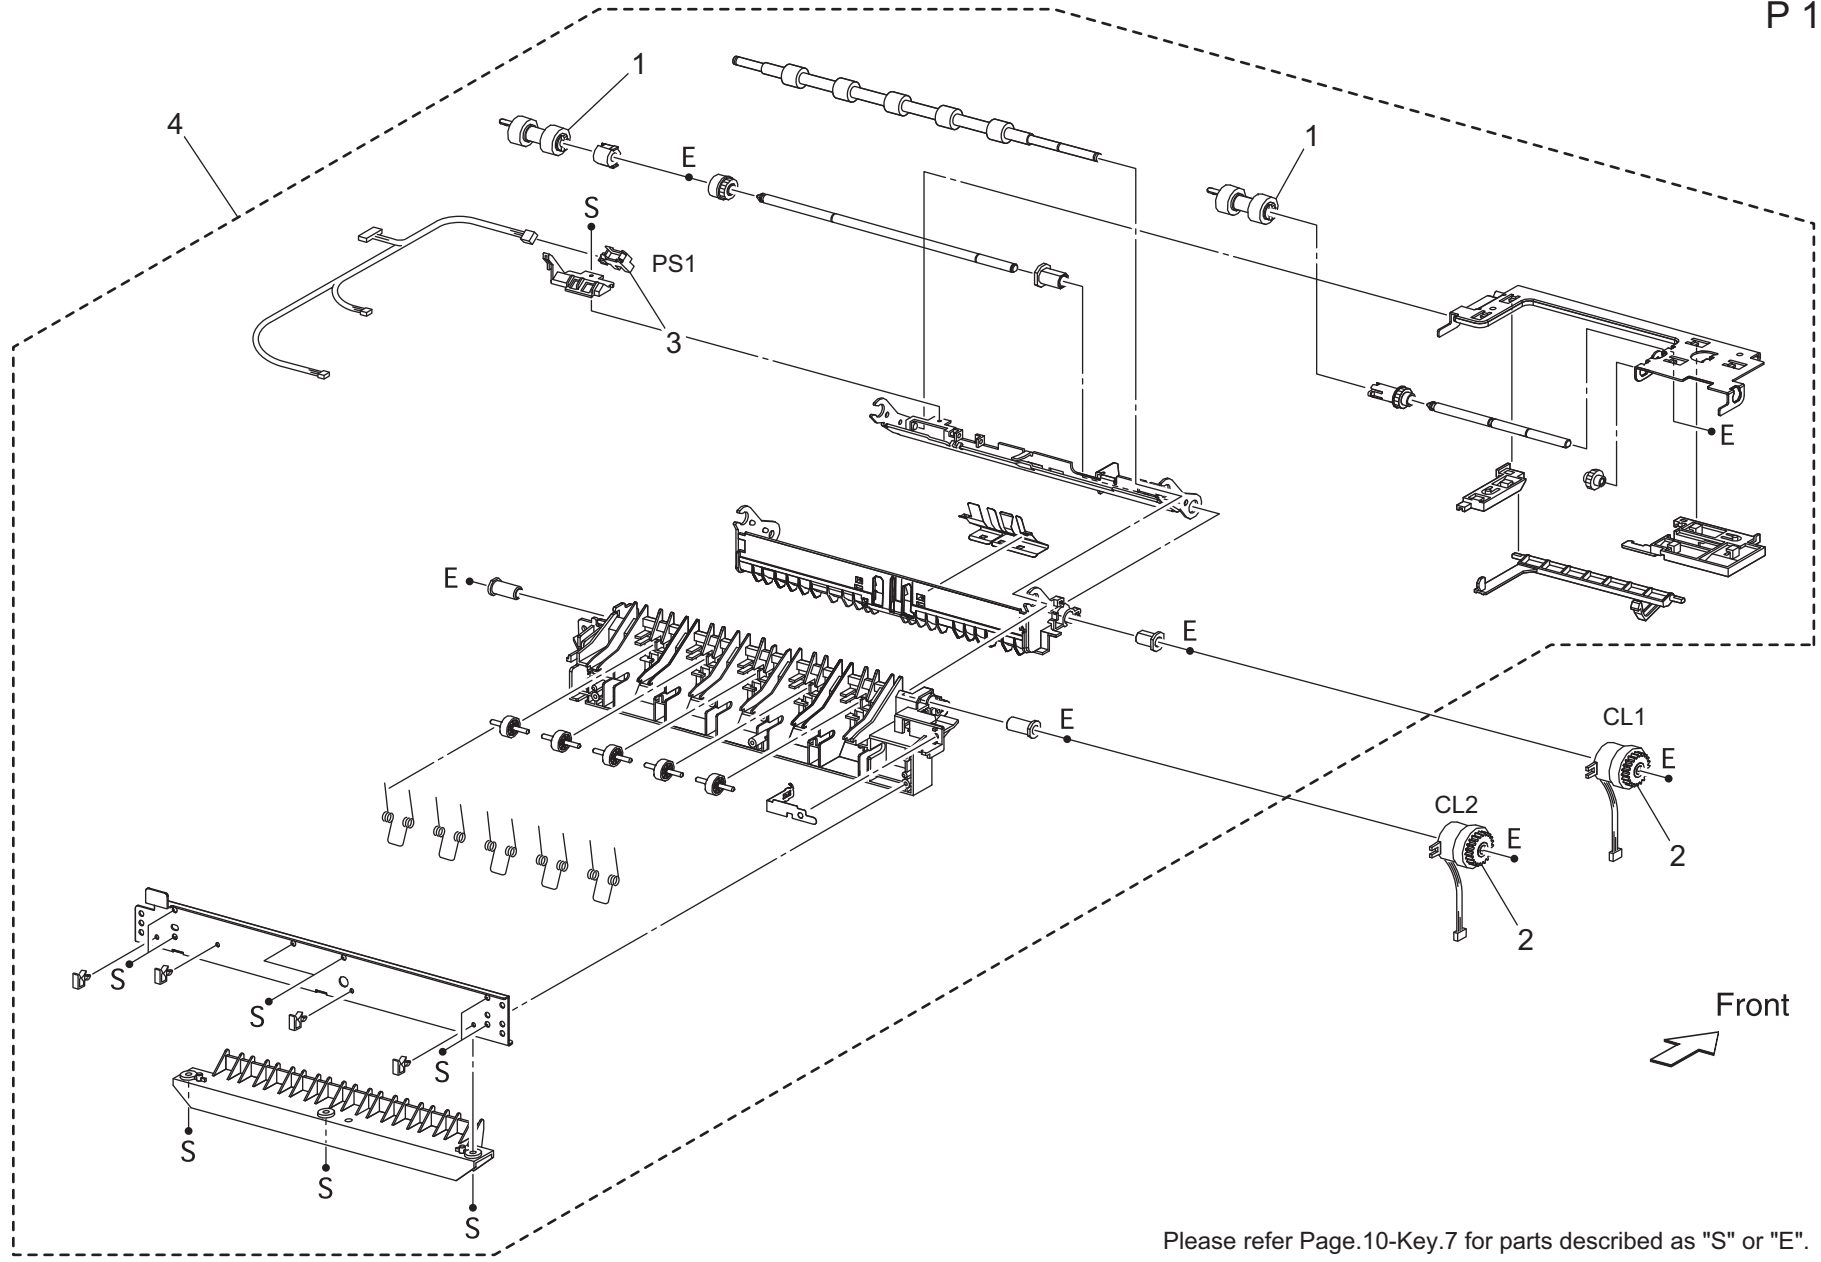 

Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P


Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP1R 00	ROLL ASSY RETARD		C	2	
2	A0DX PP11 00	CLUTCH ASSY PH		C	2	
3	A0DX PP2H 00	SENSOR OCT		I	1	
4	A0DX PP05 00	550 FEEDER OPTION		C	1	

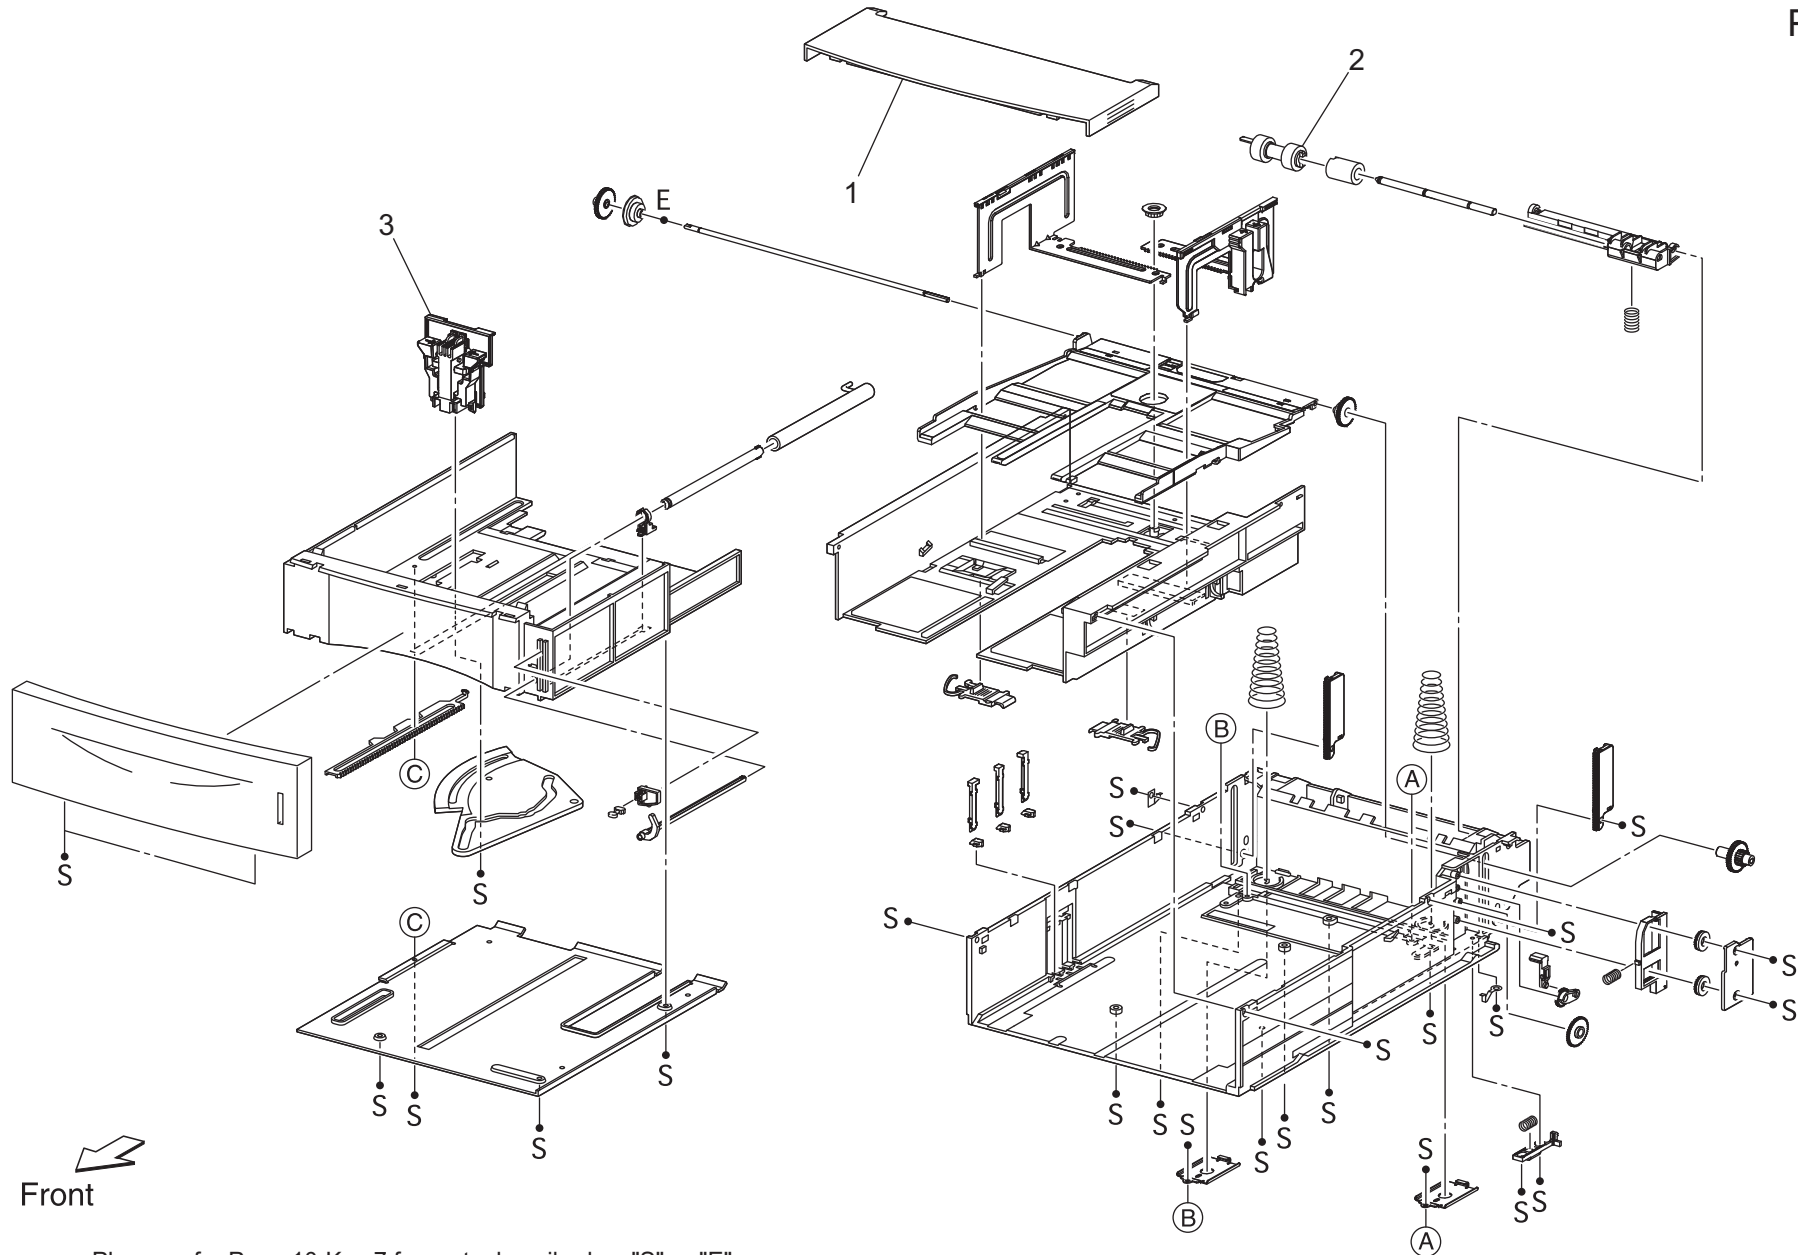 

Please refer Page.10-Key.7 for parts described as "S" or "E".

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP20 00	COVER CST		C	1	
2	A0DX PP1R 00	ROLL ASSY RETARD		C	1	
3	A0DX PP09 00	GUIDE END 550		C	1	


改訂版 REVISED EDITION	日付 DATE
	FEBRUARY 2010

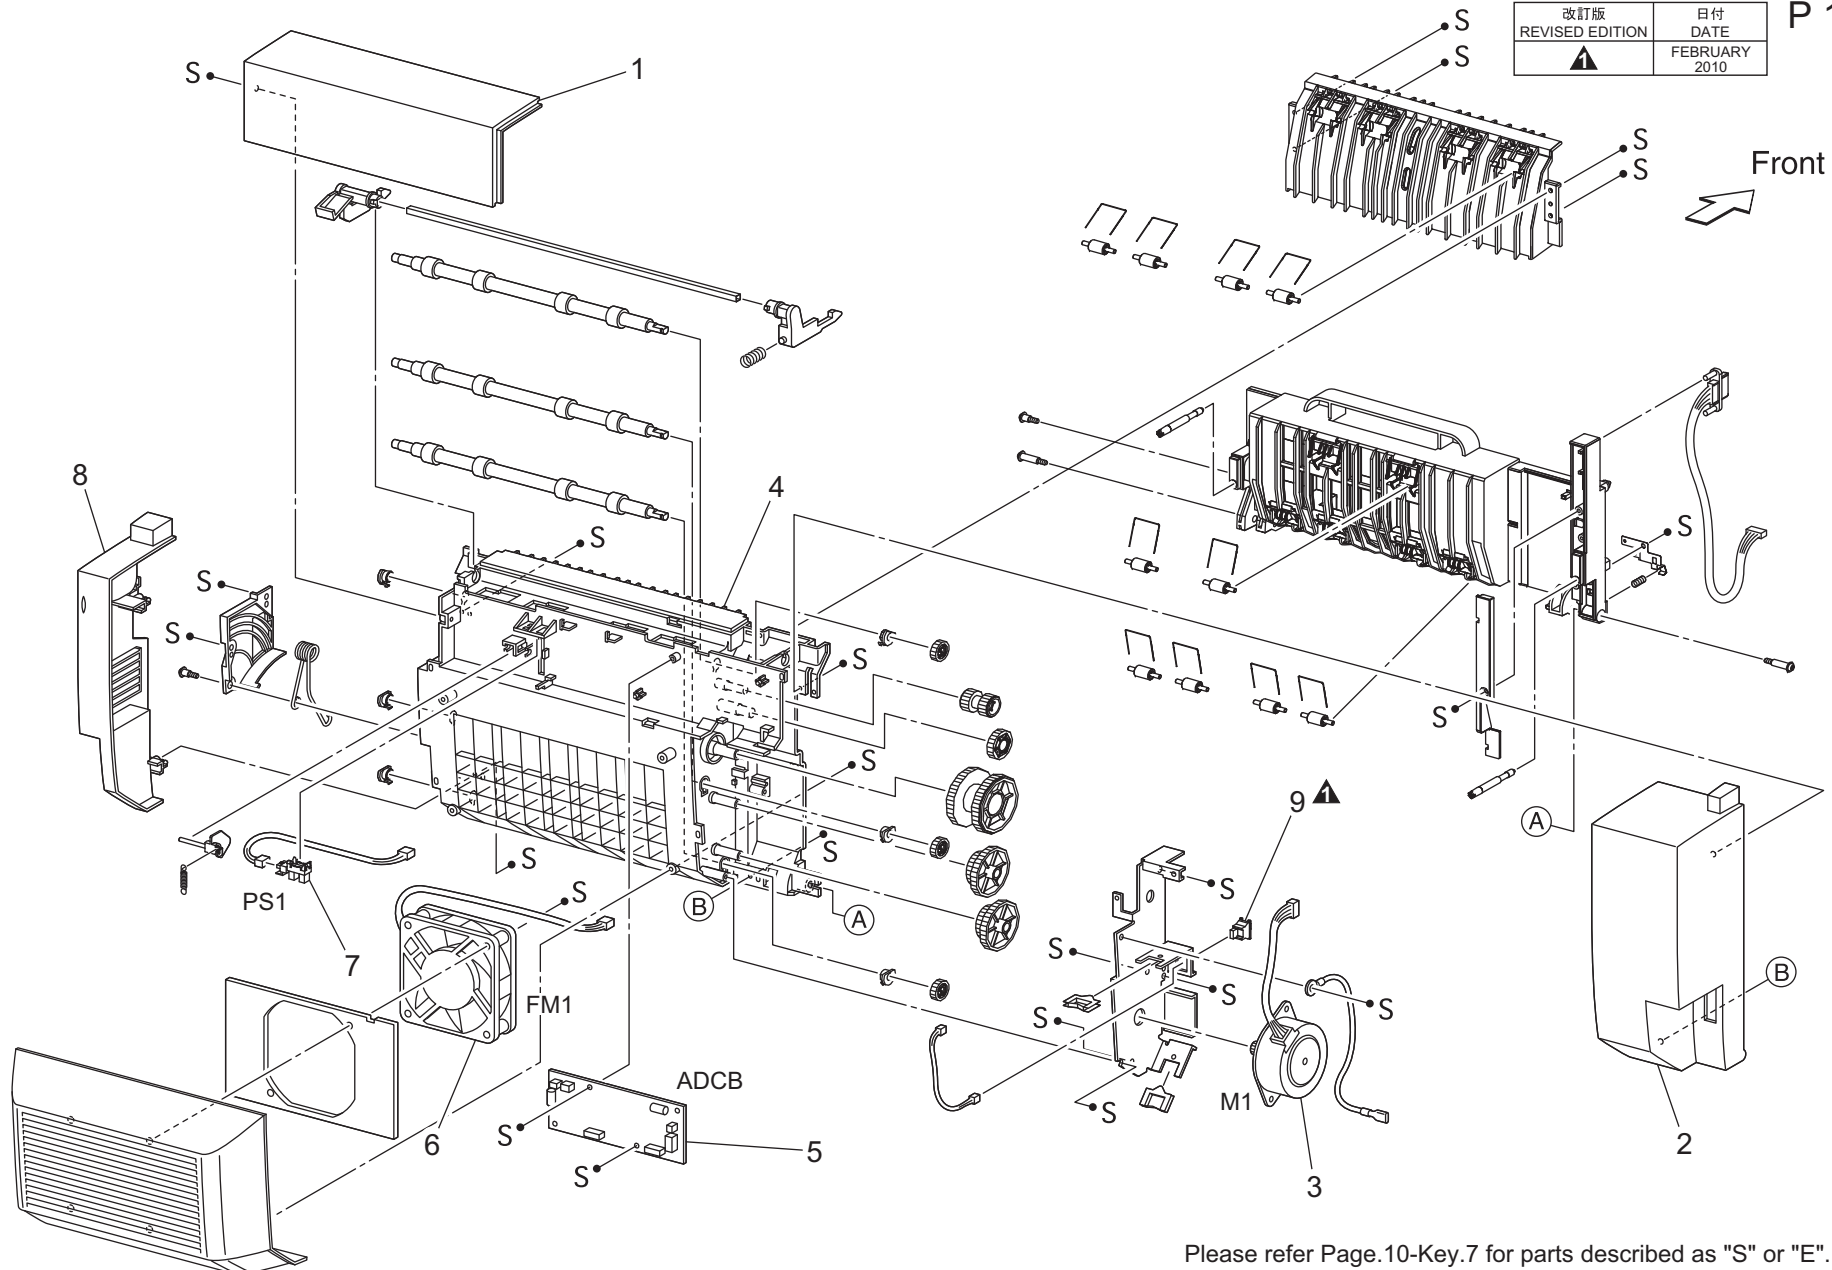 


Please refer Page.10-Key.7 for parts described as "S" or "E".

bizhub 40P

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP2F 01	COVER TOP		C	1	
2	A0DX PP28 01	COVER LEFT		C	1	
3	A0DX PP13 00	MOTOR DUPLEX		C	1	
4	A0DX PP2E 01	COVER HSG DUP		C	1	
5	A0DX PP2K 00	PWBA DUPLEX		I	1	
6	A0DX PP17 00	FAN DUP		C	1	
7	A0DX PP1F 00	SENSOR DUP		I	1	
8	A0DX PP29 01	COVER RIGHT		C	1	
9	A0DX PP0S 00	S/W REAR COVER		C	1	

改訂版 REVISED EDITION	日付 DATE
	APRIL 2009

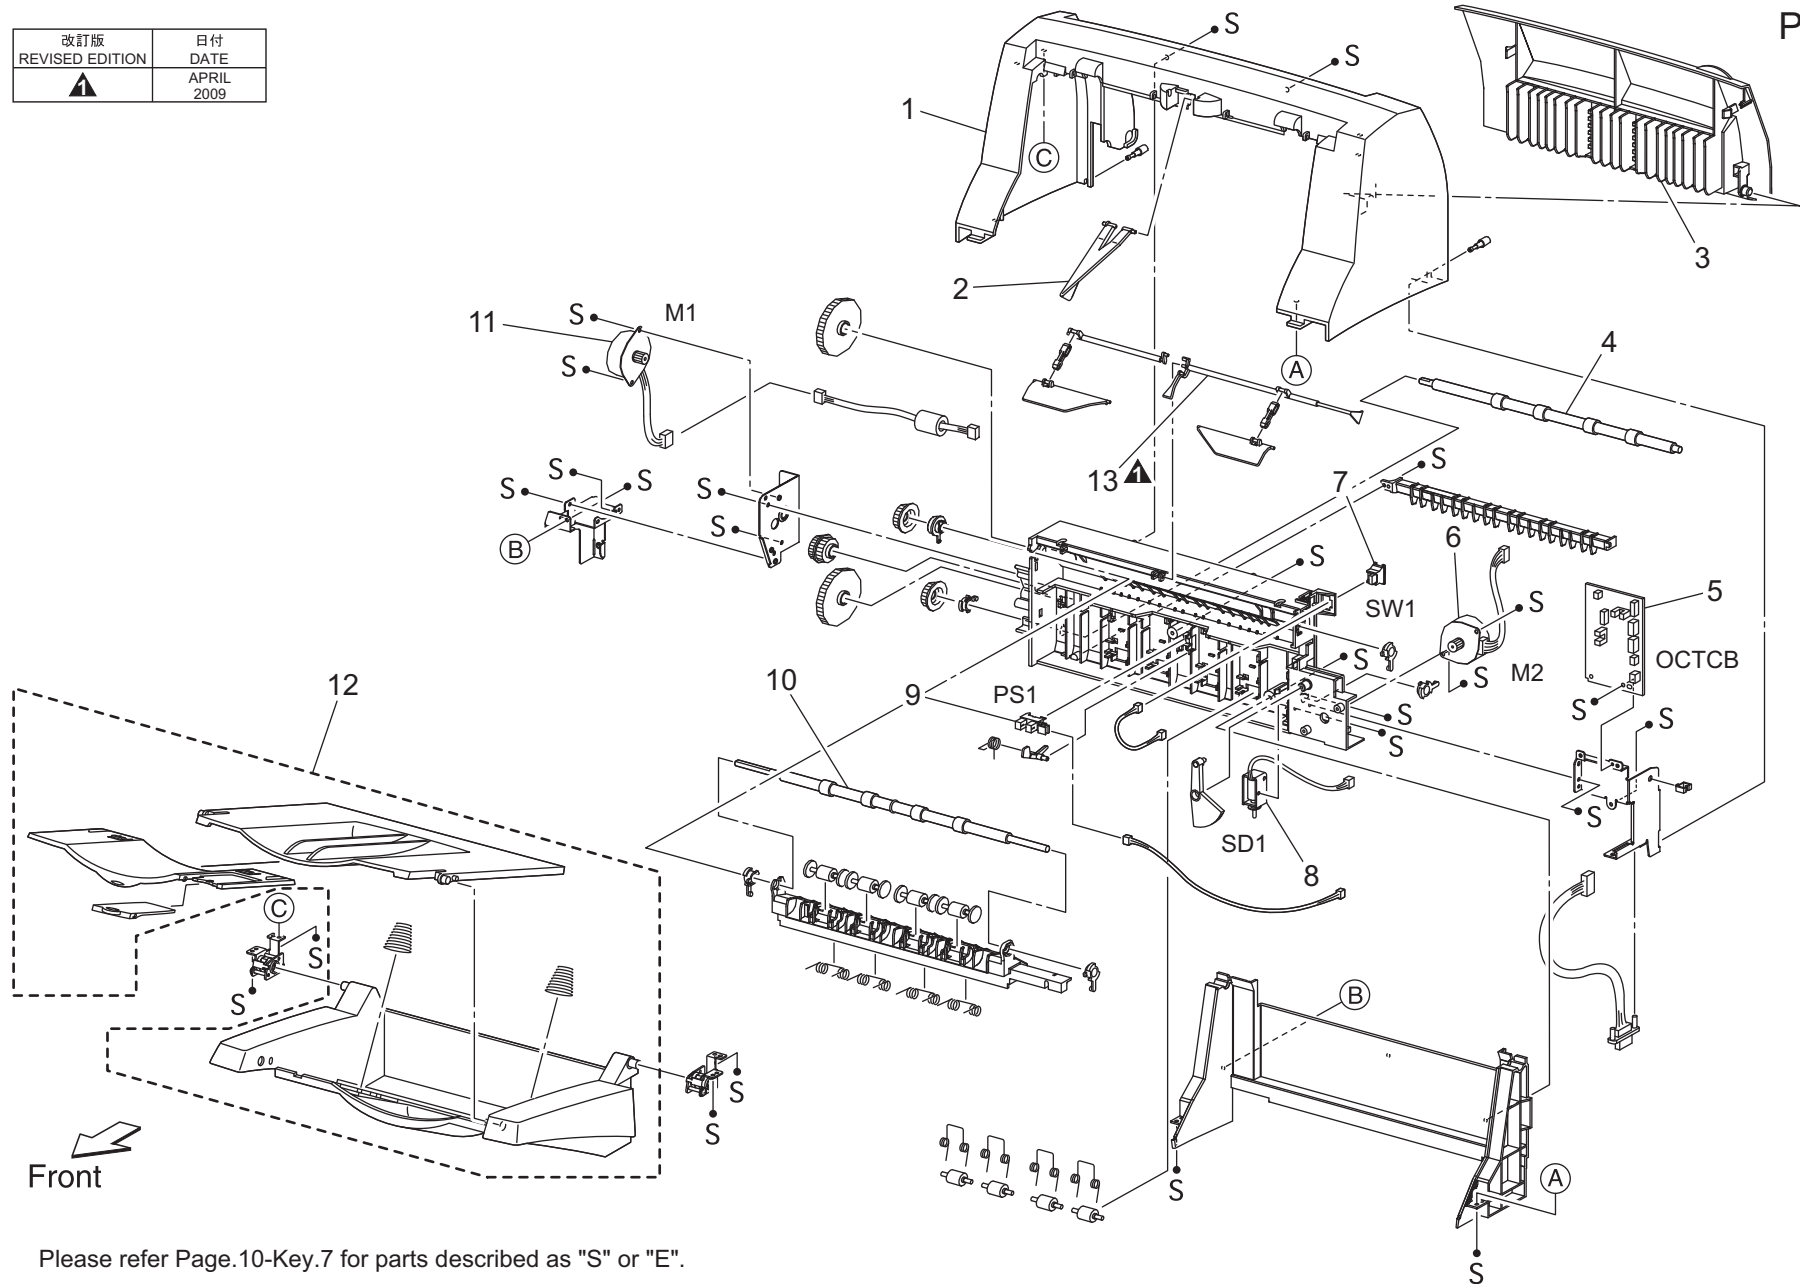 

Please refer Page.10-Key.7 for parts described as "S" or "E".

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A0DX PP1M 01	COVER OCT		C	1	
2	A0DX PP08 00	WEIGHT		D	1	
3	A0DX PP22 01	COVER REAR		C	1	
4	A0DX PP0F 00	ROLL OCT LOWER		C	1	
5	A0DX PP1J 00	PWBA OCT		I	1	
6	A0DX PP1A 00	MOTOR ASSY OFFSET		C	1	
7	A0DX PP0S 00	S/W REAR COVER		C	1	
8	A0DX PP12 00	SOLENOID ASSY GATE		C	1	
9	A0DX PP2H 00	SENSOR OCT		I	1	
10	A0DX PP0E 00	ROLL OCT UPPER		C	1	
11	A0DX PP1B 00	MOTOR ASSY OCT		C	1	
12	A0DX PP0B 01	TRAY ASST OCT		C	1	
13	A0DX PP41 00	ACTUATOR		C	1	

MAINTENANCE LIST

● The items with no Page/Key numbers are not handled as spare parts.

No.	Section	PM Parts Description	Maintenance Cycle (K=1,000)		Parts No.	Destinations	Page/Key	Note
			QTY	Replace				
1	-	Maintenance Kit 110V *3	1	200K *1	A0FM012	110 V areas	P10-6	*2
2	-	Maintenance Kit 220V *3	1	200K *1	A0FM0Y2	220 V areas	P10-6	*2

*1: Continuous printing, B/W ratio: 5 %

*2: For details about maintenance procedure of lower feeder unit, see the optional lower feeder unit service manual.

*3: The Maintenance kit includes Rollers(for feed roller, pick-up roller and separation roller), Transfer roller and Fuser unit.

DESTINATION

Destination No.		Destinations		V	Hz	Model No.
A	A1	JAPAN		100	50/60	
	A2	JAPAN		200	50/60	
B		USA, CANADA		120	60	A0DX-013
C		EUROPEAN TYPE		220-240	50/60	A0DX-023
D	D1	S.E ASIA TYPE	THAILAND, SRI LANKA, SINGAPORE, MALAYSIA, HONG KONG, PAKISTAN, INDIA, BANGLADESH, INDONESIA	220-240	50/60	A0DX-023
	D3	OCEANIA TYPE	AUSTRALIA, NEW ZEALAND	220-240	50/60	A0DX-023
E		PHILIPPINES		220-240	50/60	
F	F1	SAUDI ARABIA		127	60	
	F2	SAUDI ARABIA		220-240	50/60	
G	G1	C.S AMERICA		220-240	50/60	
	G2	C.S AMERICA		120	60	
H		TAIWAN		110	60	
I		JORDAN, LEBANON, SYRIA, SOUTH AFRICA, IRAQ, IRAN, N.YEMEN, CAMEROON, UAE, BAHRAIN, OMAN, QATAR, KUWAIT, KENYA, TUNISIA, IVORY COAST, MOROCCO		220-240	50/60	
J		CHINA		220-240	50/60	
K		KOREA		220-240	50/60	

bizhub 40P